



**Cigar lighter (power outlet) fuse in the Peugeot 206 is the fuse #22 in the Instrument panel fuse box.**

## Table of Contents

### Fuse box location

- Dashboard fuse box

- Engine compartment

### Fuse box diagrams

- 2002

- 2003

- 2004, 2005, 2006

- 2007, 2008

## Fuse box location

### Dashboard fuse box

*It is located below the dashboard (driver's side) behind the panel.*



Unscrew the catch a quarter turn using a coin then remove the cover to gain access to the fuses.

## Engine compartment


*To gain access to the box in the engine compartment (next to the battery), unclip the cover.*



# Fuse box diagrams

2002

Engine compartment

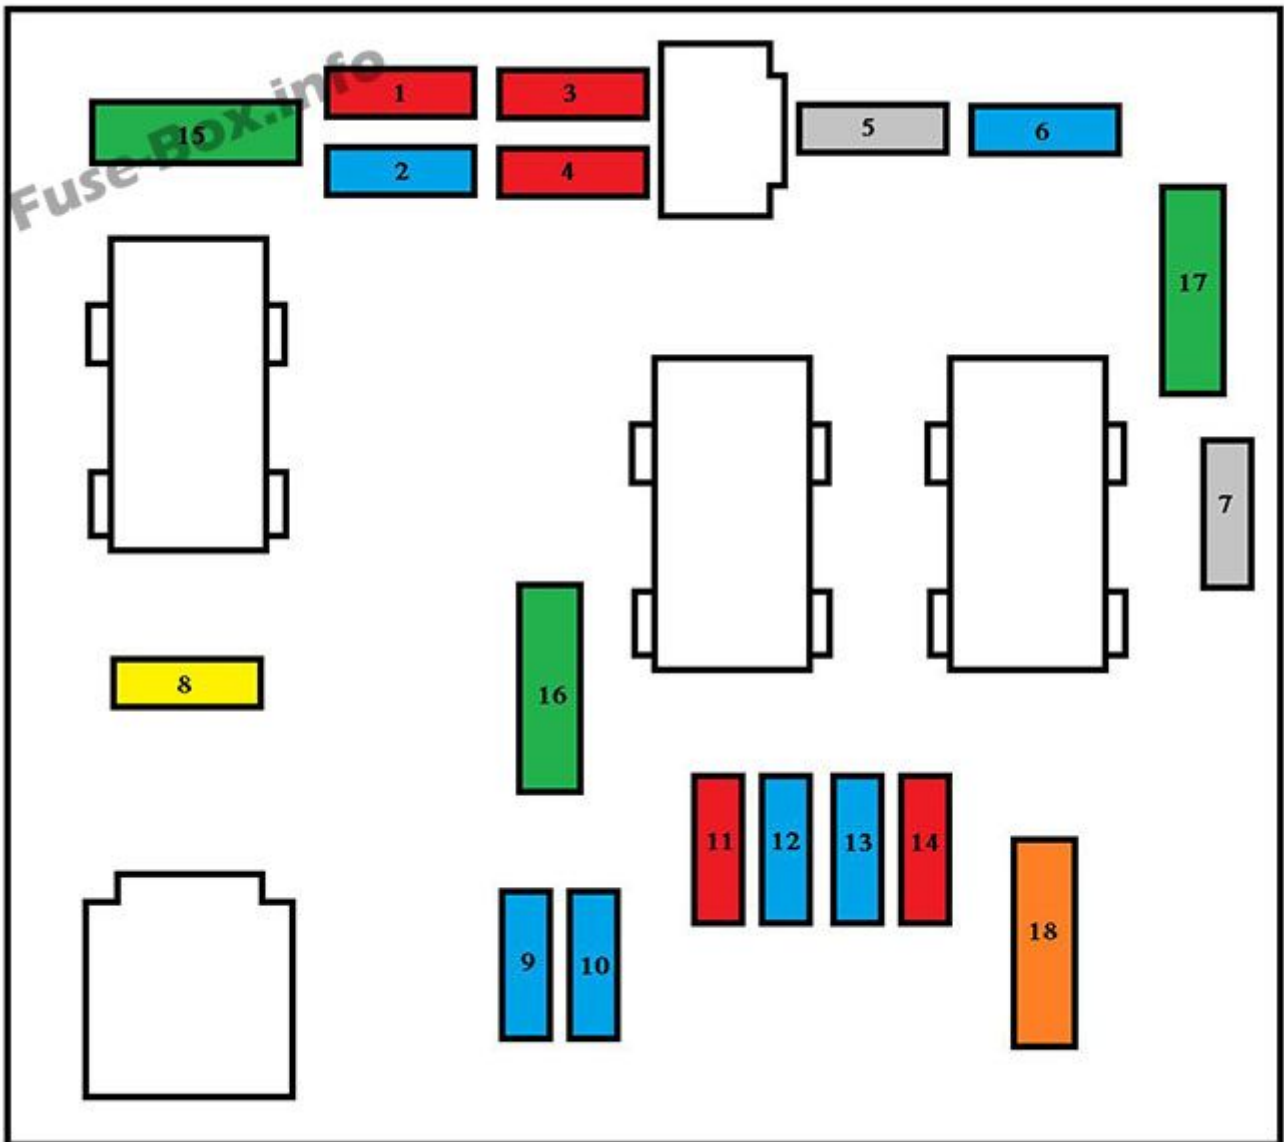

Advertisements


## Assignment of the fuses in the engine compartment (2002)

<b>No</b>	<b>Rating</b>	<b>Functions</b>
1	10A	Pre-heat unit (diesel) - Water in diesel sensor - Reversing lights switch - Speed sensor -Air flow sensor (diesel)
2	15A	Canister solenoid valve - Fuel pump
3	10A	ABS control unit
4	10A	Automatic gearbox control unit - Engine control unit
5	—	Not used
7	—	Not used
8	20A	Fan assembly relay - Engine control unit - Diesel injection pump - Diesel high pressure regulator - Engine management solenoid valve
9	15A	Left-hand dipped beam
10	15A	Right-hand dipped beam
11	10A	Left-hand main beam
12	15A	Right-hand main beam
13	15A	Horns
14	10A	Front and rear windscreen wash pumps
15	30A	Throttle housing heater - Diesel injection pump - Oxygen sensor - Engine control unit -Air flow sensor - Ignition coil - Engine management solenoid valve - Diesel heater -Injectors
16	30A	Air pump relay
17	30A	High and low speed windscreen wiper
18	40A	Air conditioning fan
<b>maxi fuses:</b>		

No	Rating	Functions
1*	20A	Fan unit
2*	60A	ABS
3*	30A	ABS
4*	70A	Built-in systems interface supply
5*	70A	Built-in systems interface supply
6*	—	Not used
7*	30A	Ignition switch supply
8*	—	Not used
		<i>* The maxi fuses provide additional protection for the electrical systems. Any work on these must be carried out by a PEUGEOT dealer</i>

Advertisements

## Passenger compartment

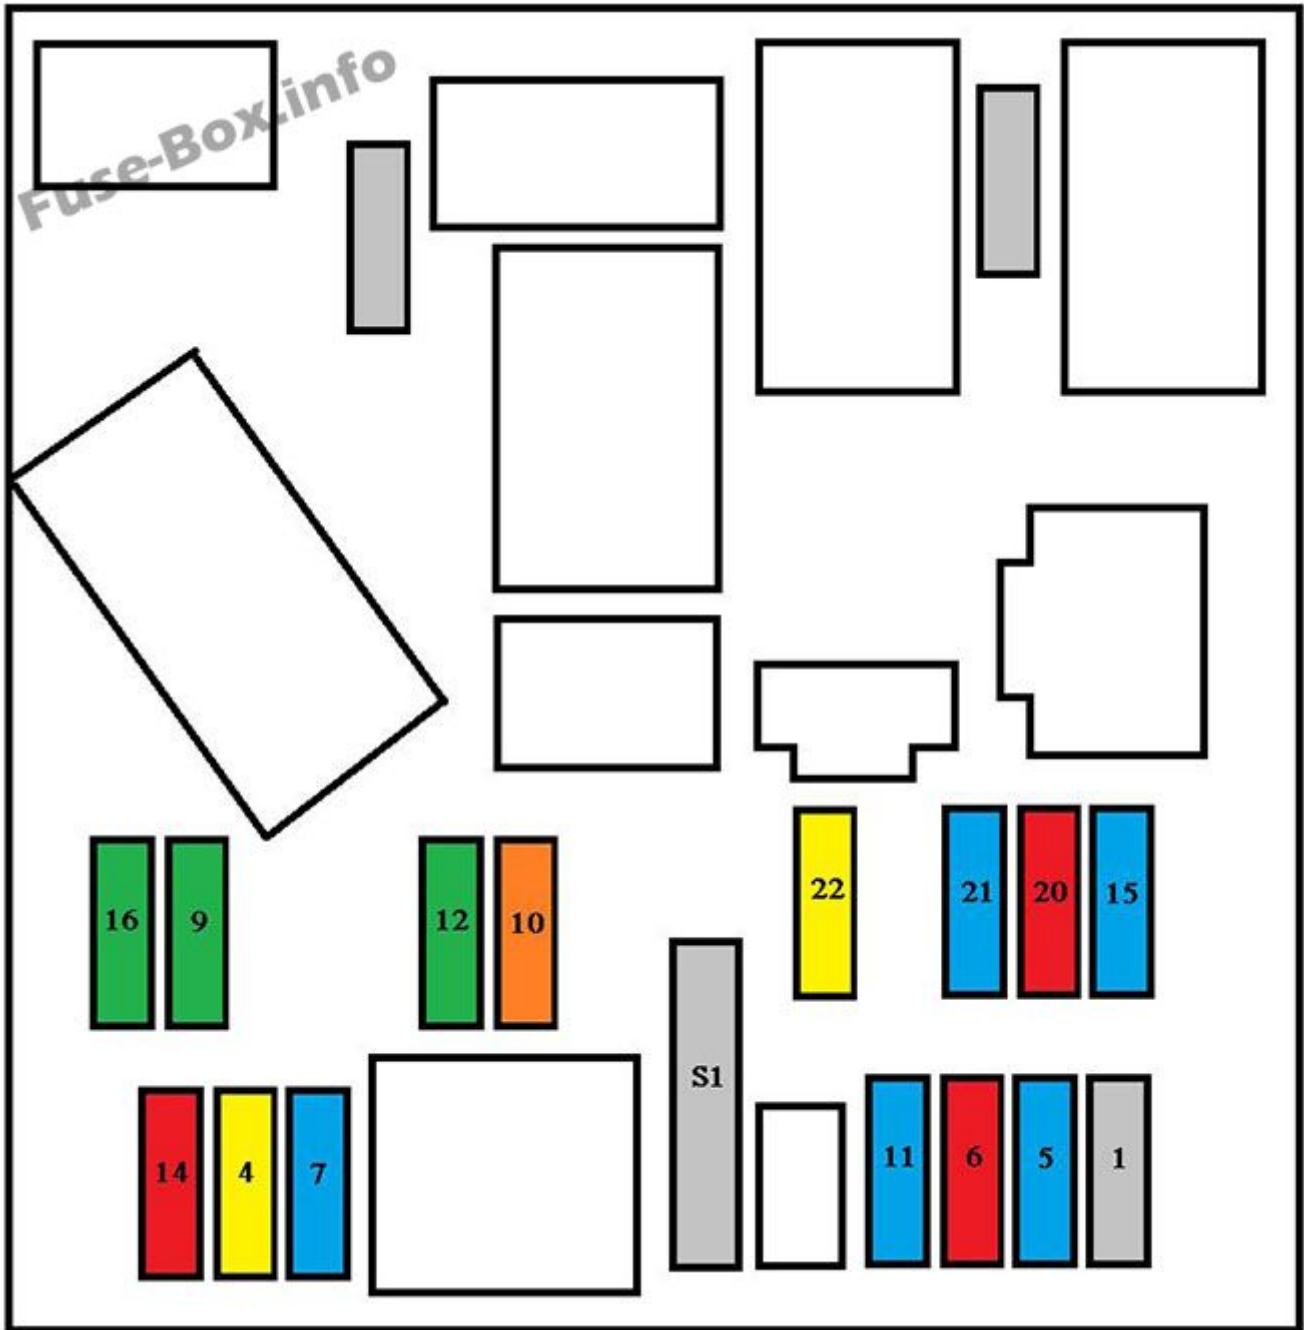

### Assignment of the fuses in the passenger compartment (2002)


No	Rating	Functions
1	15A	Alarm
4	20A	Multi-function display - Navigation control unit - Boot lighting - Audio equipment
5	15A	Automatic gearbox diagnostics
6	10A	Coolant level - Automatic gearbox - Audio equipment
7	15A	Driving school accessory - Alarm

<b>No</b>	<b>Rating</b>	<b>Functions</b>
9	30A	Rear electric windows
10	40A	Rear screen amd mirror demisting
11	15A	Rear windscreen wiper
12	30A	Front windscreen wiper - Sunroof
14	10A	Engine fuse box - Air bags - Steering wheel controls - Rain sensor
15	15A	Instrument panel - Multi-function display - Navigation control unit - Air conditioning - Audio equipment
16	30A	Locking/unlocking controls for doors, bonnet and boot - Deadlocking controls
20	10A	Right-hand brake light
21	15A	Left-hand brake light - 3rd brake light
22	30A	Front and rear (206 SW) courtesy light - Map reader - Glove box lighting - Lighter - 12 volts rear socket (206 SW)
S1	Shunt	PARC shunt

## 2003


Advertisements

## Engine compartment

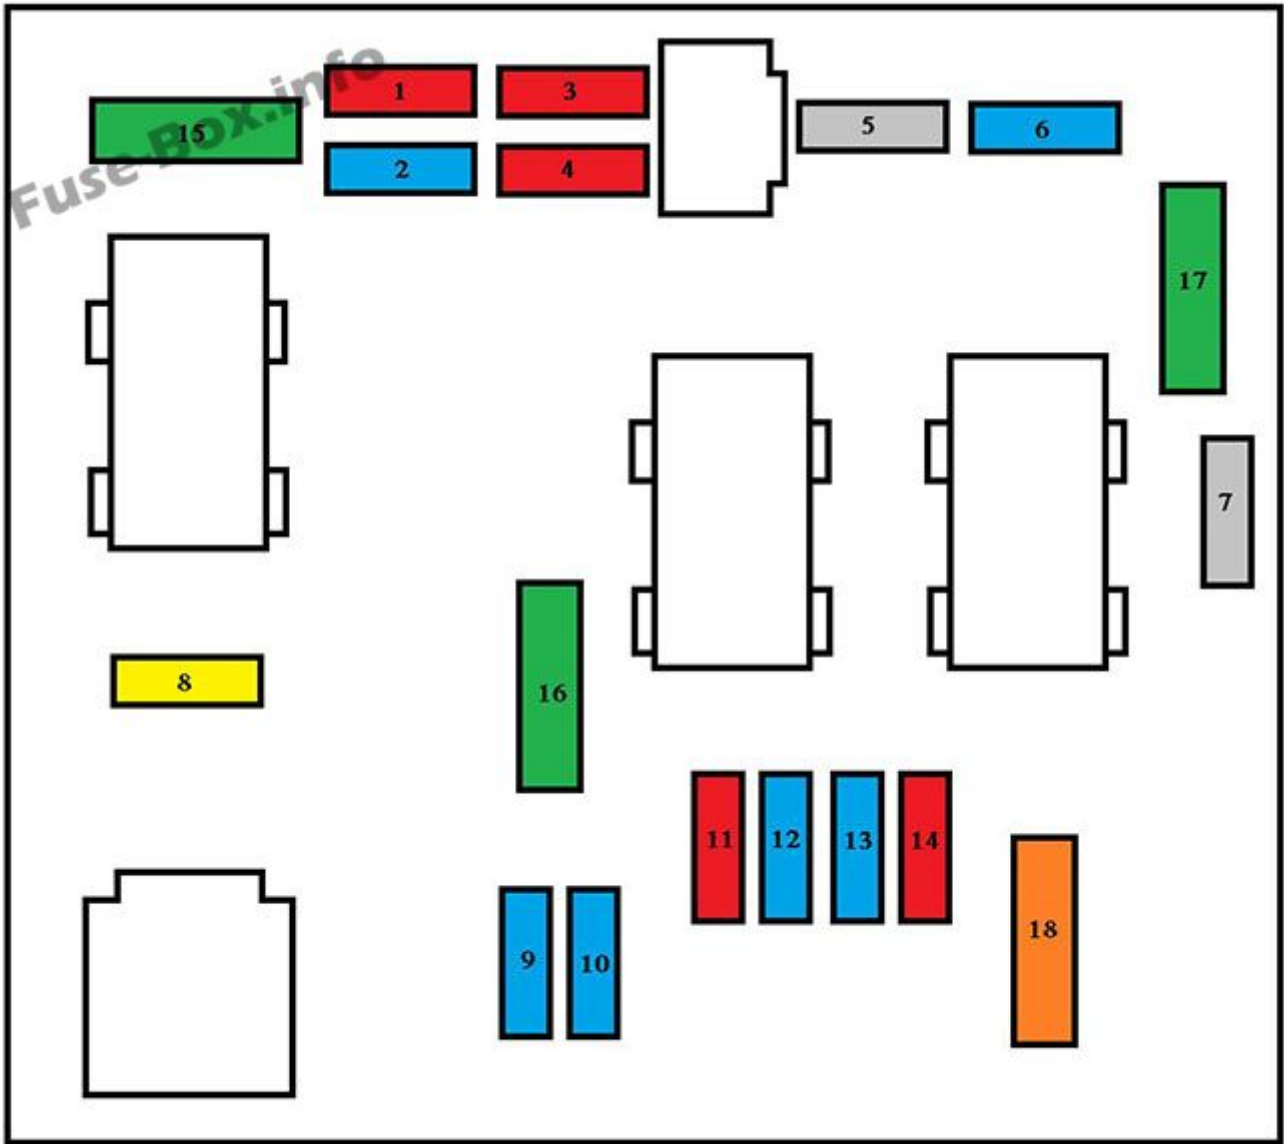

OR



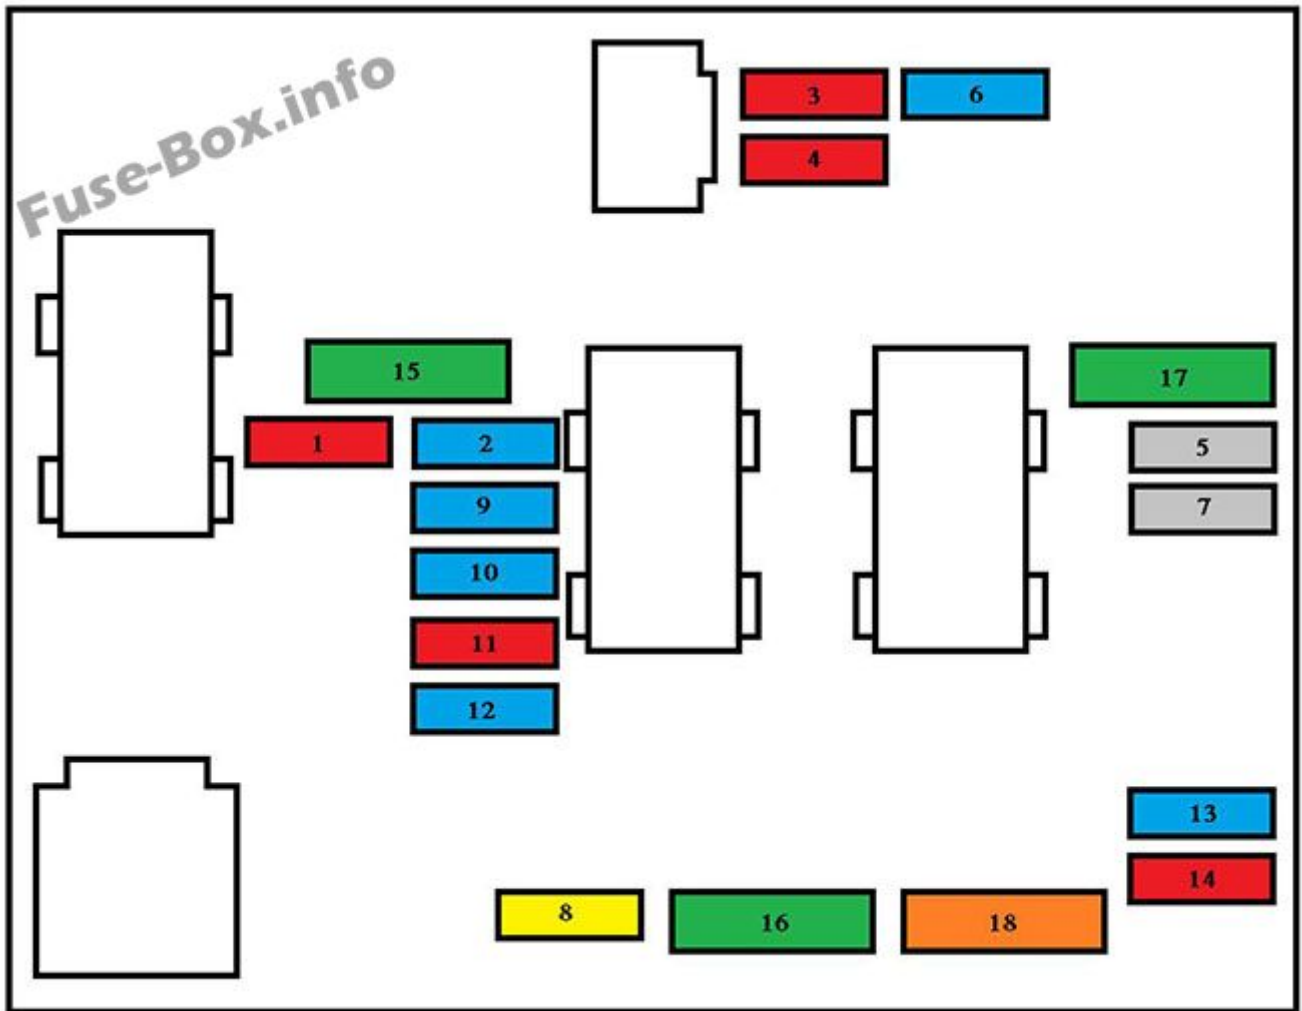

### Assignment of the fuses in the engine compartment (2003)


N°	Rating	Functions
1	10 A	Pre-heat unit (diesel) - Water in diesel sensor - Reversing lights switch - Speed sensor - Air flow sensor (diesel)
2	15 A	Canister solenoid valve - Fuel pump
3	10 A	ABS/ESP engine control unit - ESP stop switch
4	10 A	Automatic gearbox control unit - Engine control unit
5	—	Not used
6	15 A	Front fog lamps
7	-	Not used

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
8	20 A	Fan assembly relay - Engine control unit - Diesel injection pump - Diesel high pressure regulator - Engine management solenoid valve
9	15 A	Left dipped beam
10	15 A	Right dipped beam
11	10 A	Left main beam
12	15 A	Right main beam
13	15 A	Horns
14	10 A	Front and rear windscreen wash pumps
15	30 A	Throttle housing heater - Diesel injection pump - Oxygen sensor - Engine control unit - Air flow sensor - Ignition coil - Engine management solenoid valve - Diesel heater - Injectors - Engine variable timing solenoid valve (206 GTi 180) - Engine variable air intake solenoid valve (206 GTi 180)
16	30 A	Air pump relay
17	30 A	High and low speed windscreen wiper
18	40 A	Air conditioning fan
<b>maxi fuses:</b>		
1*	20 A	Fan unit
2*	60 A	ABS/ESP
3*	30 A	ABS/ESP
4*	70 A	Built-in systems interface supply
5*	70 A	Built-in systems interface supply
6*	-	Not used

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
7*	30 A	Ignition switch supply
8*	-	Not used
		<i>* The maxi fuses provide additional protection for the electrical systems. Any work on these fuses must be carried out by a PEUGEOT dealer</i>

Advertisements

## Passenger compartment

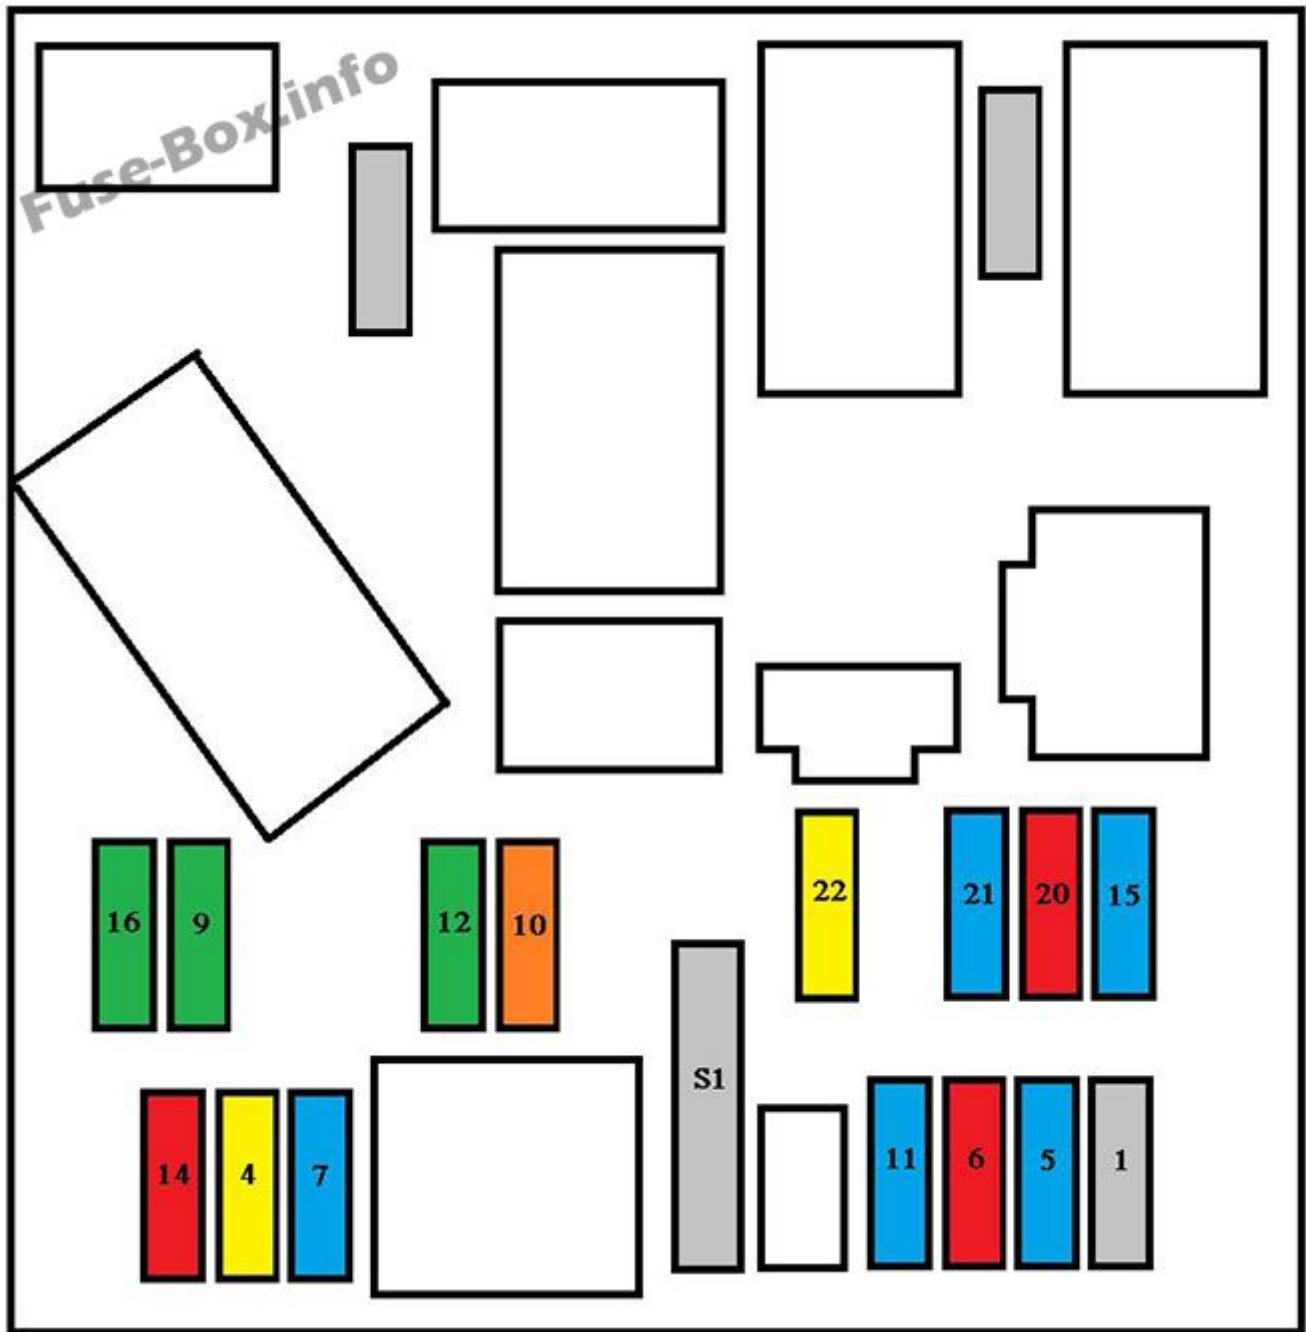

### Assignment of the fuses in the passenger compartment (2003)


No	Rating	Functions
1	15A	Alarm
4	20A	Multi-function display - Navigation control unit - Boot lighting - Audio equipment
5	15A	Automatic gearbox diagnostics
6	10A	Coolant level - Automatic gearbox - Audio equipment
7	15A	Driving school accessory - Alarm

<b>No</b>	<b>Rating</b>	<b>Functions</b>
9	30A	Rear electric windows
10	40A	Rear screen amd mirror demisting
11	15A	Rear windscreen wiper
12	30A	Front windscreen wiper - Sunroof
14	10A	Engine fuse box - Air bags - Steering wheel controls - Rain sensor
15	15A	Instrument panel - Multi-function display - Navigation control unit - Air conditioning - Audio equipment
16	30A	Locking/unlocking controls for doors, bonnet and boot - Deadlocking controls
20	10A	Right-hand brake light
21	15A	Left-hand brake light - 3rd brake light
22	30A	Front and rear (206 SW) courtesy light - Map reader - Glove box lighting - Lighter - 12 volts rear socket (206 SW)
S1	Shunt	PARC shunt


**2004, 2005, 2006**

Advertisements

Engine compartment

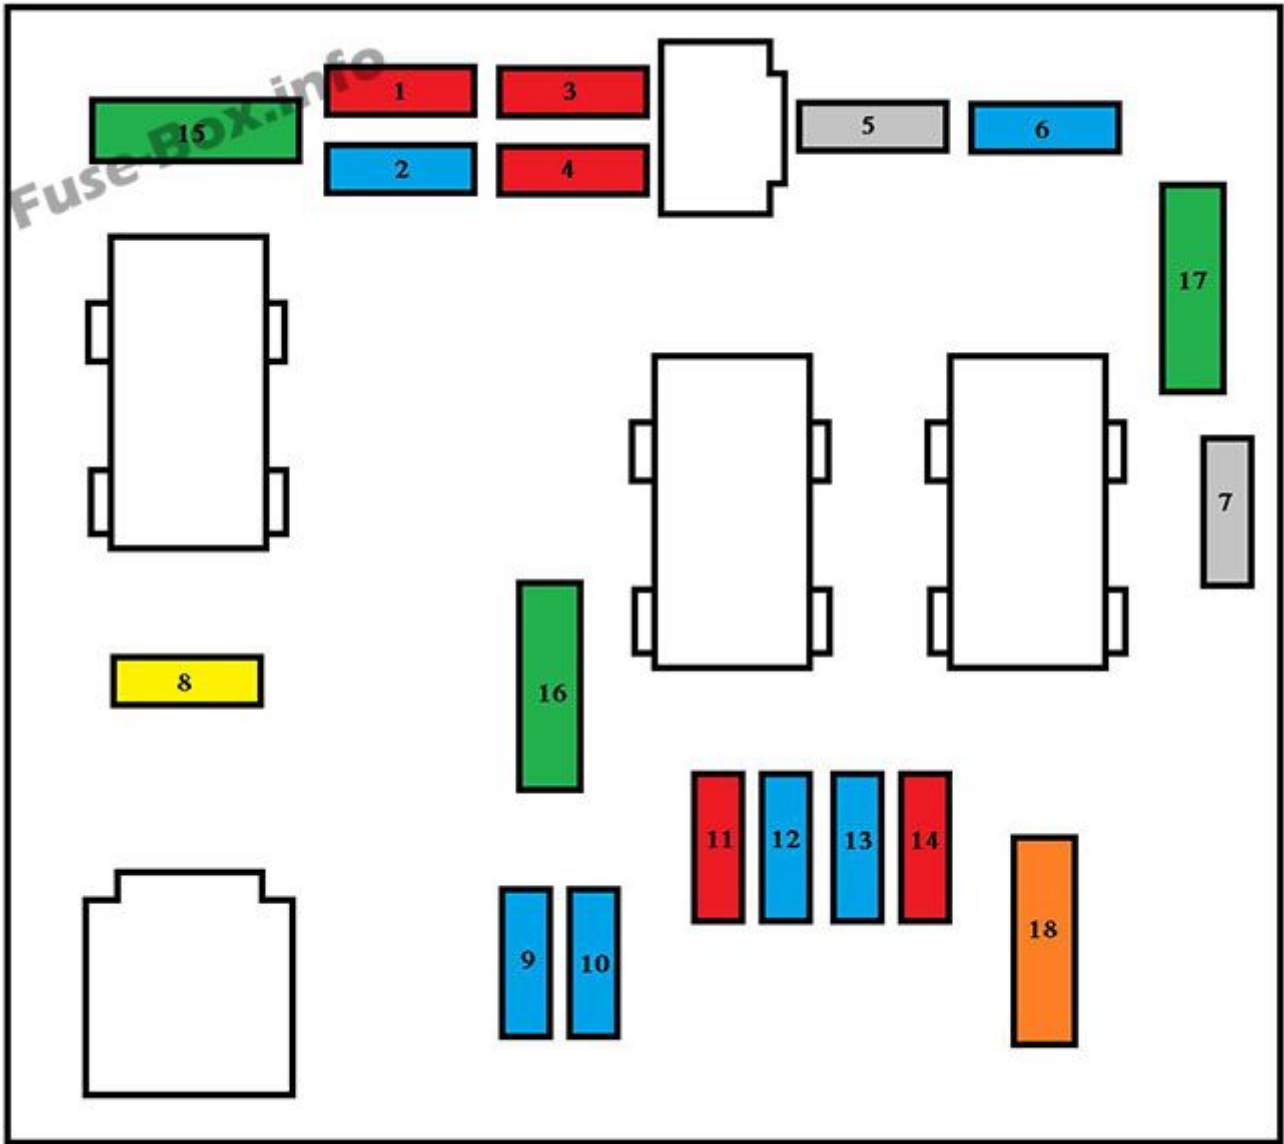

OR

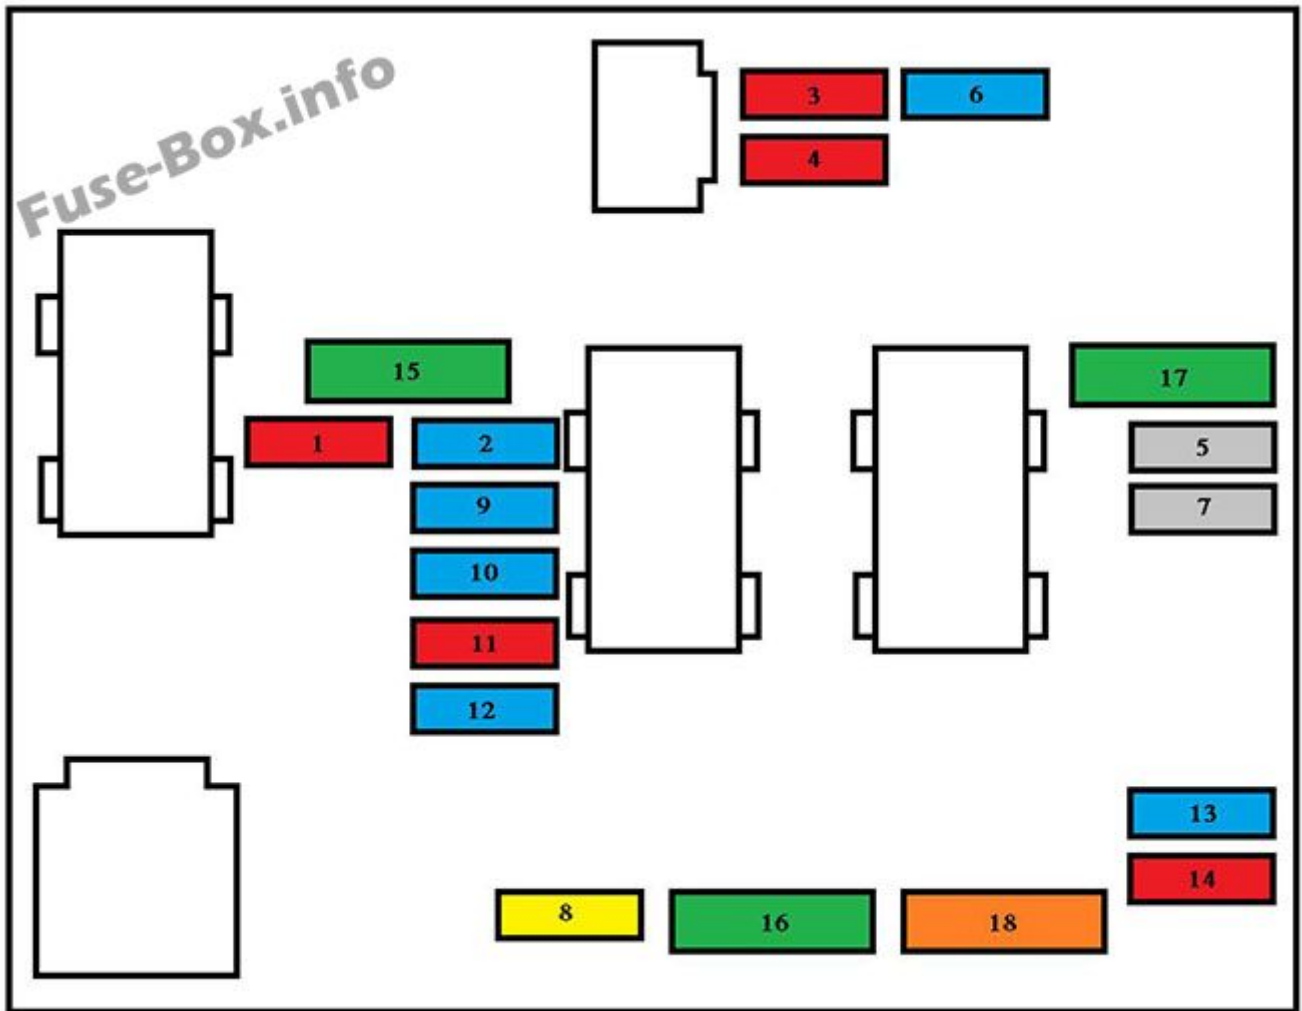

### Assignment of the fuses in the engine compartment (2004, 2005, 2006)

N°	Rating	Functions
1	10 A	Pre-heat unit (diesel) - Water in diesel sensor - Reversing lights switch -Speed sensor - Air flow sensor (diesel)
2	15 A	Canister solenoid valve - Fuel pump
3	10 A	ABS/ESP engine control unit - ESP brake switch
4	10 A	Automatic gearbox control unit - Engine control unit
5	-	Not used
6	15 A	Front fog lamps
7	20 A	Not used
8	20 A	Fan assembly relay - Engine control unit - Diesel injection pump - Diesel high pressure regulator - Engine management solenoid valve


<b>N°</b>	<b>Rating</b>	<b>Functions</b>
9	15 A	Left dipped beam
10	15 A	Right dipped beam
11	10 A	Left main beam
12	15 A	Right main beam
13	15 A	Horn
14	10 A	Front and rear windscreen wash pumps
15	30 A	Throttle housing heater - Diesel injection pump - Oxygen sensor - Engine control unit - Air flow sensor - Ignition coil - Engine management solenoid valve - Diesel heater - Injectors - Variable engine timing solenoid valve (206 GTi 180) - Engine variable air intake solenoid valve (206 GTi 180)
16	30 A	Air pump relay
17	30 A	High and low speed windscreen wiper
18	40 A	Air conditioning fan
<b>maxi fuses:</b>		
1*	20 A	Fan unit
2*	60 A	ABS/ESP
3*	30 A	ABS/ESP
4*	70 A	Built-in systems interface supply
5*	70 A	Built-in systems interface supply
6*	-	Not used
7*	30 A	Ignition switch supply



N°	Rating	Functions
8*	20 A	Audio amplifier
		* The maxi fuses provide additional protection for the electrical systems. Any work on these must be carried out by a PEUGEOT dealer.

Advertisements

Passenger compartment

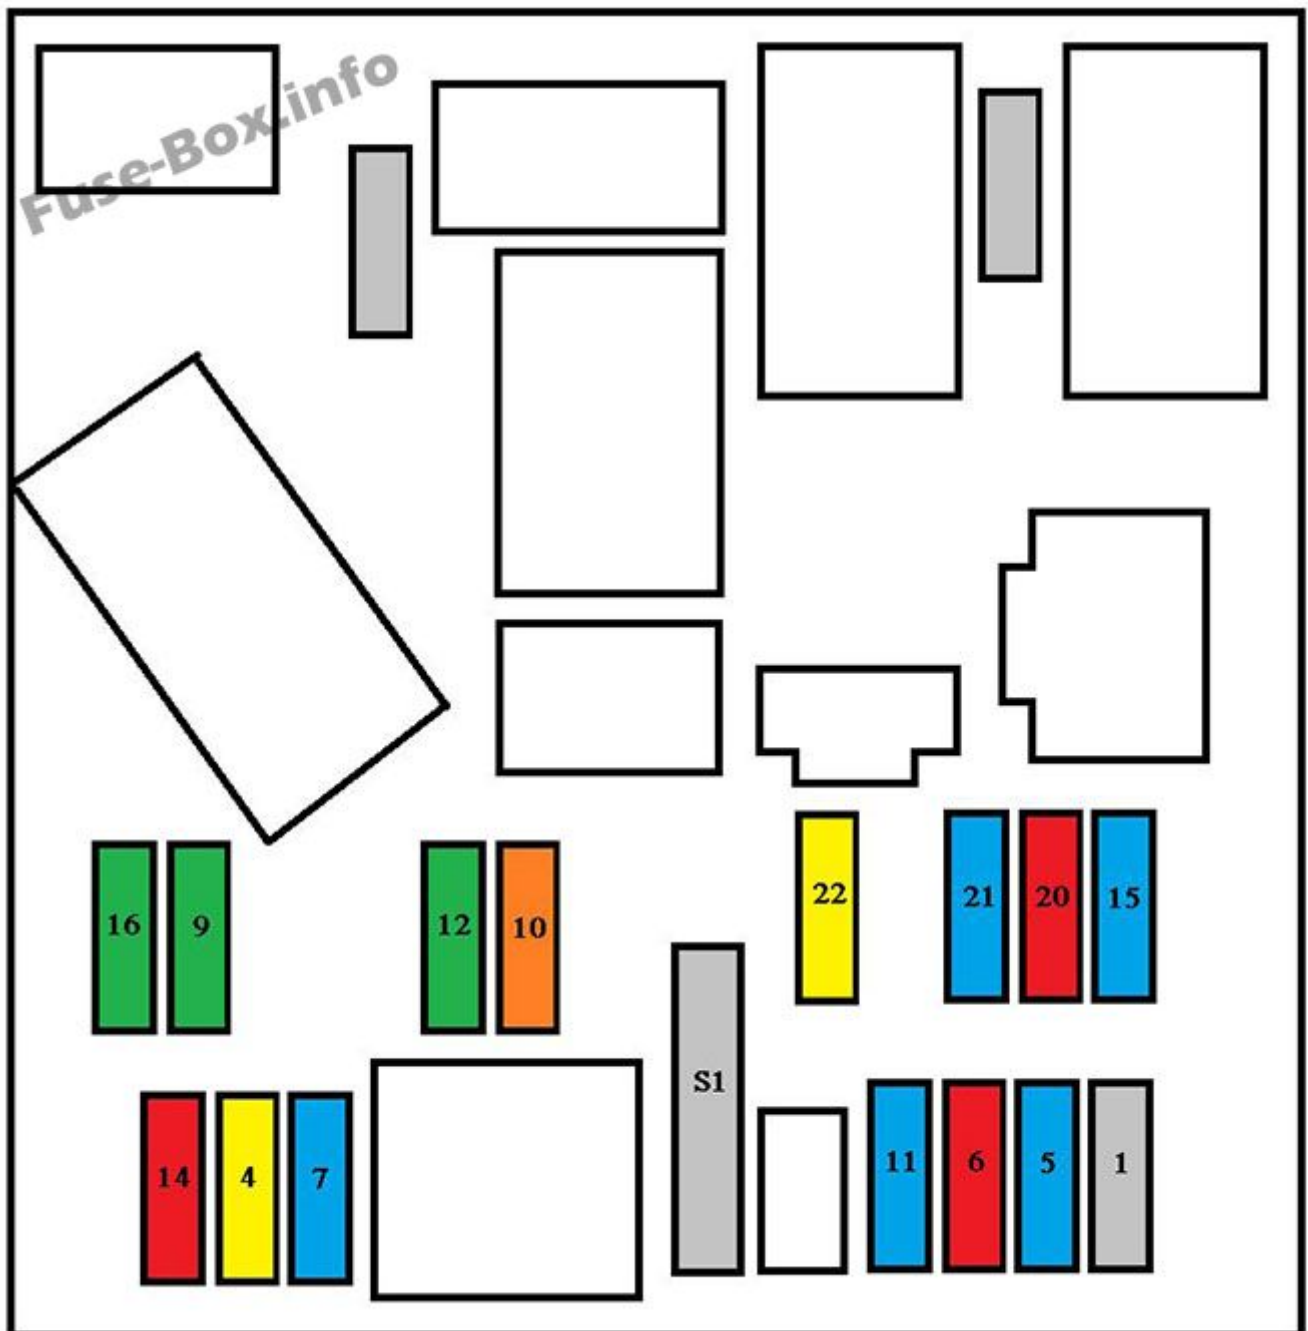


**Assignment of the fuses in the passenger compartment (2004, 2005, 2006)**

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
1	15 A	Alarm siren
4	20 A	Multifunction display - Navigation control unit - Boot lighting - Audio equipment - Steering wheel controls - Trailer
5	15 A	Automatic gearbox diagnostics
6	10 A	Coolant level - Automatic gearbox - Audio equipment - Steering wheel angle sensor (ESP)
7	15 A	Driving school accessory - Alarm
9	30 A	Rear electric windows
10	40 A	Rear screen and mirror demisting
11	15 A	Rear windscreen wiper
12	30 A	Front electric windows - Sunroof
14	10 A	Engine fuse box - Air bags - Steering wheel controls - Rain sensor
15	15 A	Instrument panel - Multifunction display - Navigation control unit - Air conditioning - Audio equipment
16	30 A	Locking/unlocking controls for doors, bonnet and boot - Deadlocking controls
20	10 A	Right-hand brake light
21	15 A	Left-hand brake light - 3rd brake light
22	20 A	Front courtesy light and rear courtesy light (206 SW) - Map reader -Glove box lighting - Lighter - 12 volts rear socket (206 SW)
S1	Shunt	PARC shunt


# 2007, 2008

Advertisements

## Engine compartment

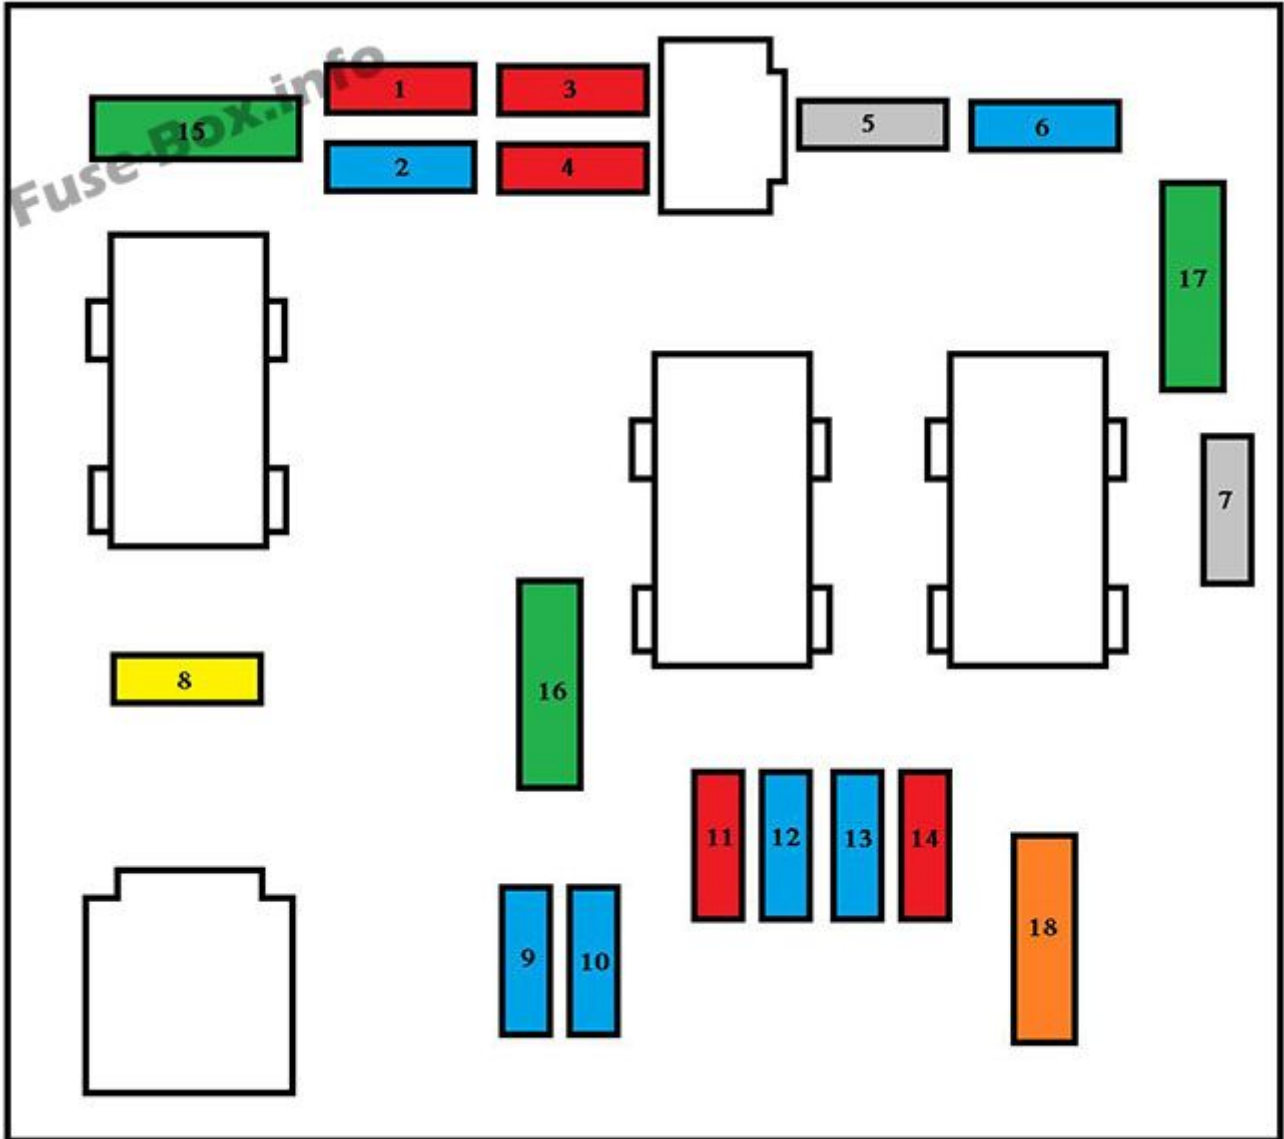

OR

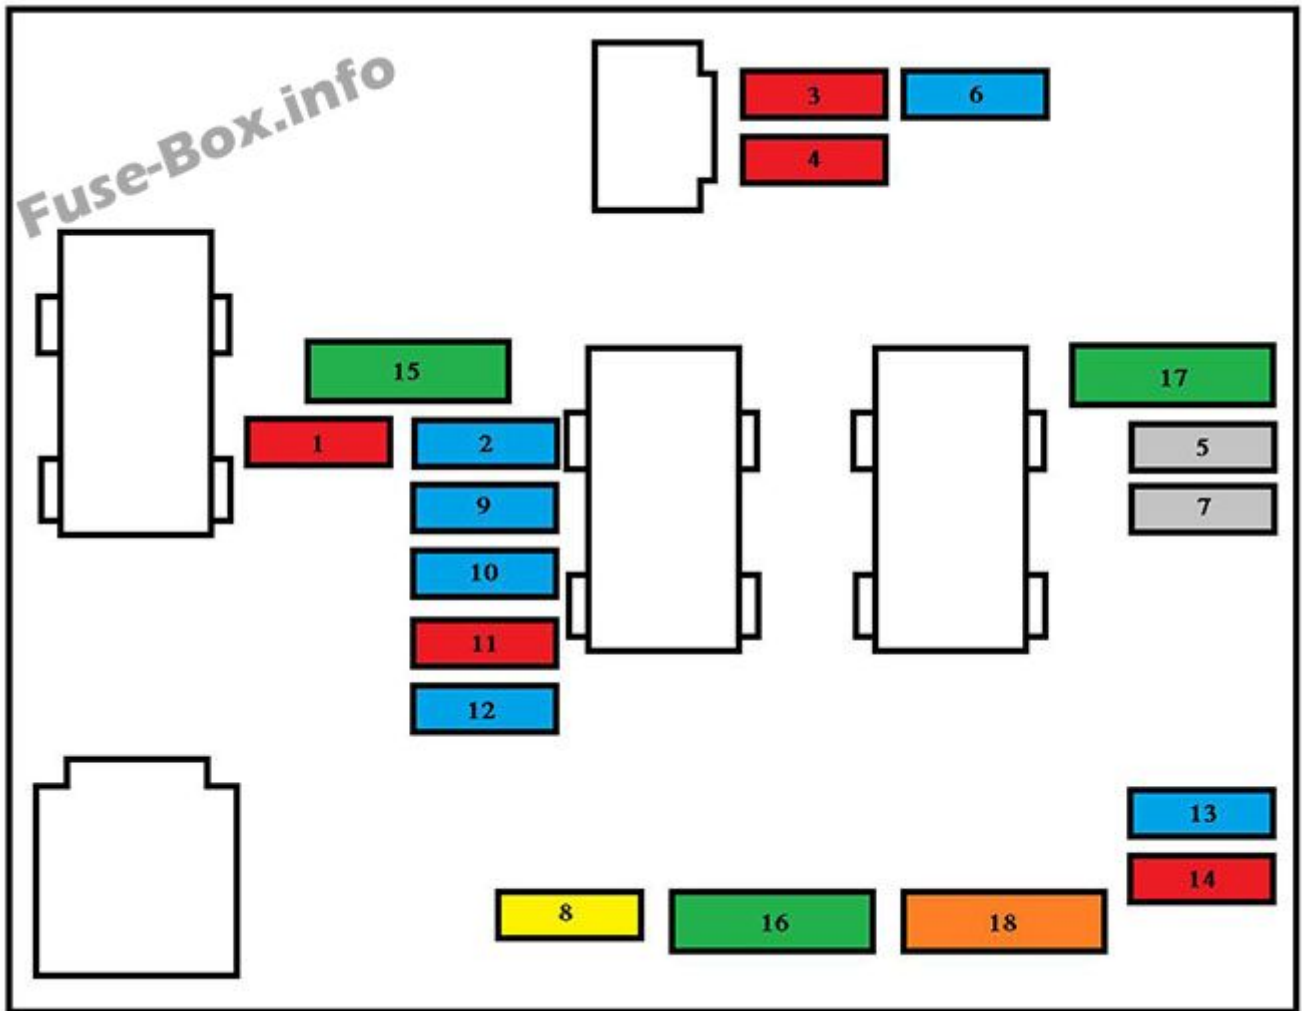

### Assignment of the fuses in the engine compartment (2007, 2008)


N°	Rating	Functions
1	10 A	Pre-heat unit (diesel) - Water in diesel sensor - Reversing lights switch - Speed sensor - Air flow sensor (diesel)
2	15 A	Canister solenoid valve - Fuel pump
3	10 A	ABS/ESP engine control unit - ESP brake switch
4	10 A	Automatic gearbox control unit - Engine control unit
5	-	Not used
6	15 A	Front fog lamps
7	-	Not used
8	20 A	Fan assembly relay - Engine control unit - Diesel injection pump - Diesel high pressure regulator - Engine management solenoid valve

<b>N°</b>	<b>Rating</b>	<b>Functions</b>
9	15 A	Left dipped beam
10	15 A	Right dipped beam
11	10 A	Left main beam
12	15 A	Right main beam
13	15 A	Horn
14	10 A	Front and rear windscreen wash pumps
15	30 A	Throttle housing heater - Diesel injection pump - Oxygen sensor - Engine control unit - Air flow sensor - Ignition coil - Engine management solenoid valve - Diesel heater Injectors
16	30 A	Air pump relay
17	30 A	High and low speed windscreen wiper
18	40 A	Air conditioning fan
<b>maxi fuses:</b>		
1*	20 A	Fan unit
2*	60 A	ABS/ESP
3*	30 A	ABS/ESP
4*	70 A	Built-in systems interface supply
5*	70 A	Built-in systems interface supply
6*	-	Not used
7*	30 A	Ignition switch supply
8*	20 A	Audio amplifier

N°	Rating	Functions
		<p><i>* The maxi fuses provide additional protection for the electrical systems. Any work on these must be carried out by a PEUGEOT dealer.</i></p>

Advertisements

### Passenger compartment

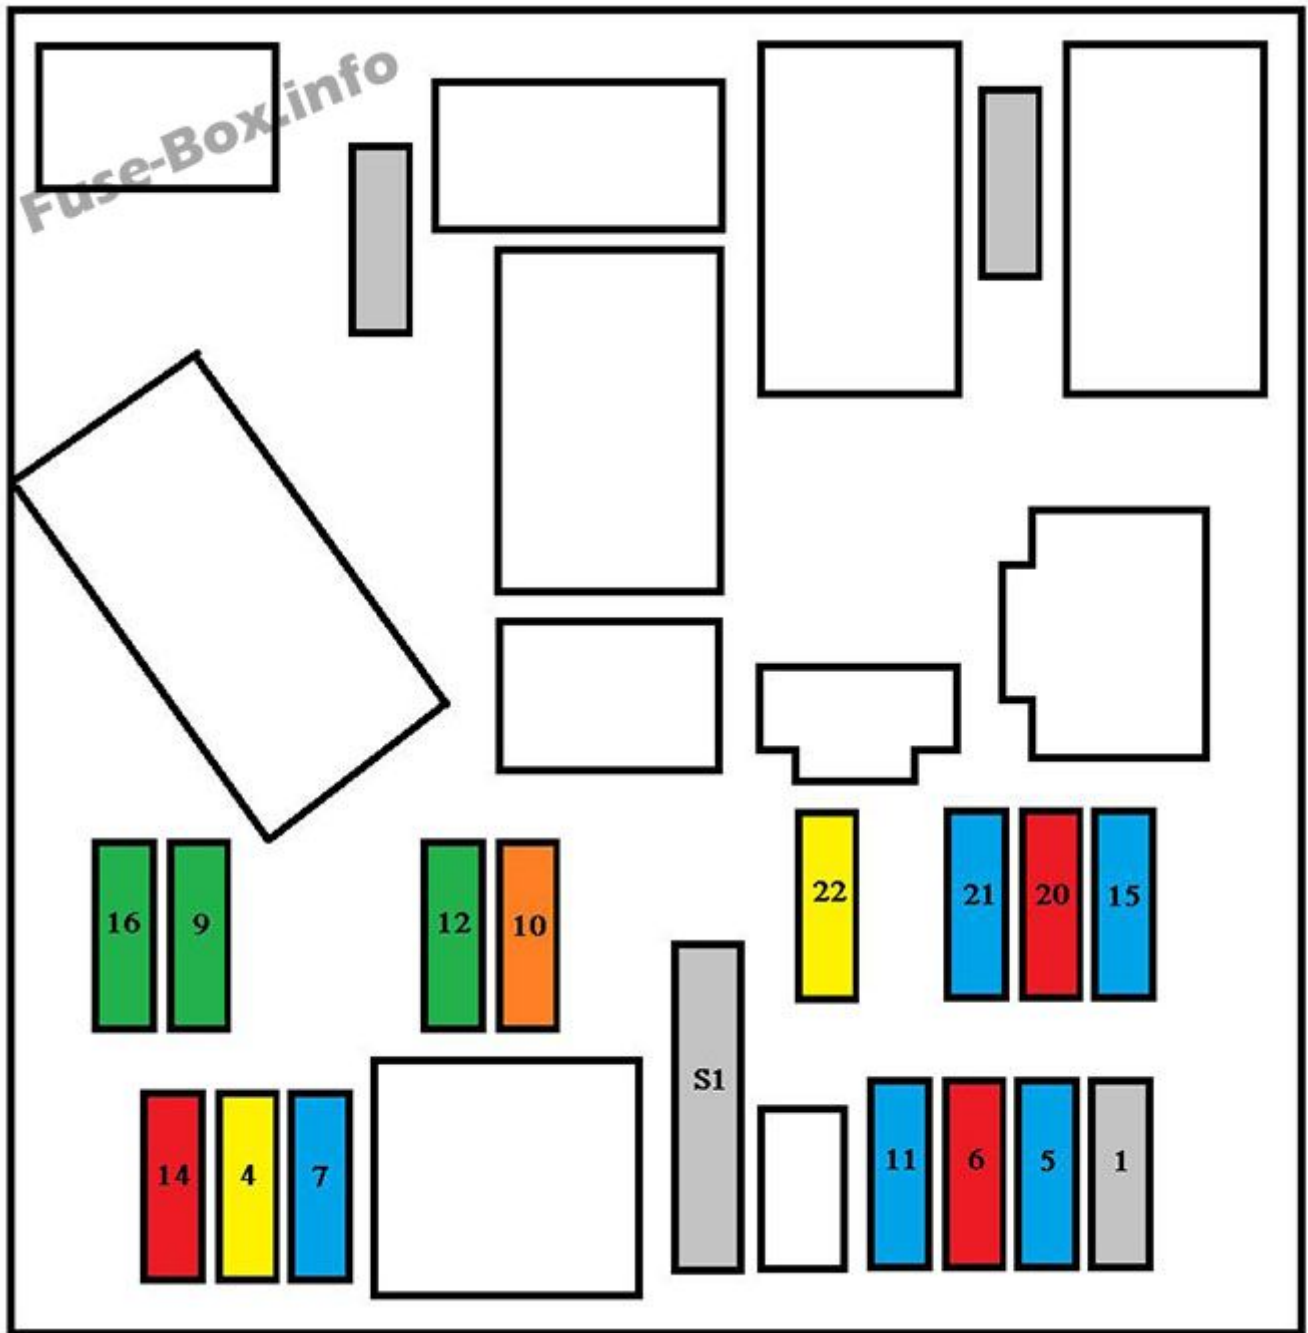

### Assignment of the fuses in the passenger compartment (2007, 2008)

<b>No</b>	<b>Rating</b>	<b>Functions</b>
1	15 A	Alarm siren
4	20 A	Multifunction display - Boot lighting - Audio equipment - Steering wheel controls - Trailer
5	15 A	Automatic gearbox diagnostics
6	10 A	Coolant level - Automatic gearbox - Audio equipment - Steering wheel angle sensor (ESP)
7	15 A	Driving school accessory - Alarm
9	30 A	Rear electric windows
10	40 A	Rear screen amd mirror demisting
11	15 A	Rear windscreen wiper
12	30 A	Front electric windows - Sunroof
14	10 A	Engine fuse box - Air bags - Steering wheel controls - Rain sensor
15	15 A	Instrument panel - Multifunction display - Air conditioning - Audio equipment
16	30 A	Locking/unlocking controls for doors, bonnet and boot - Deadlocking controls
20	10 A	Right-hand brake light
21	15 A	Left-hand brake light - 3rd brake light
22	20 A	Front courtesy light - Map reader - Glove box lighting - Lighter
S1	Shunt	Shunt PARC shunt

**Learn more:**



- 
- [How to check the fuses?](#)
  - [How to replace a blown fuse?](#)
  - [Why do car fuses blow?](#)
  - [Types of automotive fuses](#)

[Acura](#)

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Buick](#)

[Cadillac](#)

[Chevrolet](#)

[Chrysler](#)

[Citroën](#)

[Dodge](#)

[Fiat](#)

[Ford](#)

[GMC](#)

[Honda](#)

[Hummer](#)

[Hyundai](#)

[Infiniti](#)

[Isuzu](#)

[Jeep](#)



KIA

Land Rover

Lexus

Lincoln

Mazda

Mercedes-Benz

Mercury

Mitsubishi

Nissan

Oldsmobile

Opel / Vauxhall

Peugeot

Pontiac

Porsche

Renault

Saab

Saturn

Scion

SEAT

Skoda

Smart

Subaru

Suzuki

Tesla

Toyota

Volkswagen

Volvo

Mahindra

[About](#) [Contact](#) [Use of Cookies](#)

Fuse Box Diagrams © 2023

All marks are the property of their respective holders.

Disclaimer: all materials are provided for information only. For qualified repairs, contact an authorized service center.