



Cigar lighter (power outlet) fuses in the Peugeot 307 2002-2004 are the fuses #7 (12v front socket) and #10 (12v rear socket) in the Instrument panel fuse box. 2005-2007 – fuses F8 (2005: 12v rear socket) and F9 (2005: 12V front socket / 2007: 12V front socket, 12V rear socket) in the Instrument panel fuse box.

Table of Contents

Fuse box location

 Dashboard fuse box

 Engine compartment

Fuse box diagrams

 2002

 2003

 2004

 2005

 2007

Fuse box location

Dashboard fuse box

Left-hand drive vehicles: the fuse box is located in the lower dashboard (left-hand side).



Unscrew the screw a quarter of a turn with a coin, then pull the handle to open the cover and access the fuses.



Right-hand drive vehicles: it is located in the glovebox (passenger side).

Open the glove box lid to gain access.

Engine compartment

Fuse box diagrams

Advertisements

2002

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2002)

№	Rating	Functions
1	10 A	Rear fog lamp.
2	15 A	Rear screen wiper.
4	15 A	Front electric window/sunroof.
5	15 A	Rear brake light including trailer.
7	20 A	Rear courtesy light, front courtesy light, map readers -Lighter - Glove box lighting.
9	30 A	Electric windows - Press operation windows (incompatible with non-press operation windows) — Sunroof.
10	15 A	Diagnostic socket - 12 volt rear socket.
11	15 A	Audio equipment - Multi-function display B - Steering wheel controls - Automatic gearbox.
12	10 A	Front right side lights, rear right side lights, number plate and trailer lighting -Central locking switches/ alarm/ESP/hazard warning lights - Air conditioning/ash tray light - Heated seats switches - Lighter - Automatic gearbox switches -Headlamp beam corrector.
14	30 A	Door opening/closing controls - Deadlocking controls.
15	30 A	Rear windows.
16	5 A	Engine fuse box - Alarm - Particulate emission filter - Steering wheel controls - Air bags.
17	10 A	Rear right brake light, additional brake light.
18	10 A	Diagnosic socket - Steering wheel controls - Brake pedal (stop) and clutch switches -Coolant level switch - Second brake switch.
19	30 A	PARC shunt.
22	10 A	Front left side light, rear left side light - Number plate and trailer lighting.

No	Rating	Functions
23	15 A	Alarm siren - Interior alarm control unit.
24	15 A	Instrument panel - Audio equipment - Multi-function display - Air conditioning.
26	30 A	Heated rear screen.

Engine compartment

Assignment of the fuses in the engine compartment (2002)

N°	Rating	Functions
1	10 A	Automatic gearbox reversing lights switch - Automatic gearbox starting inhibitor relay control - Manual gearbox reversing lights switch -Vehicle speed sensor - Pre-heat control unit - Water in diesel sensor -DW air flow sensor.
2	15 A	Canister solenoid valve - Fuel pump.
3	10 A	Power steering control unit - ABS or ESP control unit.
4	10 A	Injection control unit - Fan unit relay control - Additional heating relay control -Automatic gearbox control unit - Automatic gearbox sequential control -Automatic gearbox shiftlock relay.
5	15 A	Particulate emission filter control unit.
6	15 A	Front fog lamps.
7	20 A	Headlamp wash pump.
8	20 A	Fan unit relay control - Injection control unit supply.
9	15 A	Left dipped beam
10	15 A	Right dipped beam
11	10 A	Left main beam
12	10 A	Right main beam
13	15 A	Horn
14	10 A	Front and rear headlamps wash pump
15	30 A	Oxygen sensors - Exhaust gas recirculation solenoid valve - Ignition coil - Diesel high pressure regulator - Injectors supply (petrol).

N°	Rating	Functions
16	40 A	Petrol engine air pump with automatic gearbox.
17	30 A	Low/high speed front wiper.
18	40 A	Air conditioning blower.
1**	30 A	Fan unit.
2**	30 A	ESP/ABS pump motor.
3**	30 A	ESP/ABS solenoid valves.
4**	60 A	Built-in Systems Interface supply.
5	70 A	Built-in Systems Interface supply.
6	20 A	Heated seats.
7	30 A	Ignition switch, power.
8**	70 A	Power steering electro-pump unit.
		<i>** The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i>

2003

Advertisements

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2003)

No	Rating	Functions
1	10 A	Rear fog lamp.
2	15 A	Rear screen wiper.
4	15 A	Front electric window - Sunroof.
5	15 A	Left brake light including trailer.
7	30 A	Rear courtesy light, front courtesy light, map readers -12 V front socket - Glove box lighting.
9	30 A	Front electric windows - Automatic electric windows - Sunroof.
10	15 A	Diagnostic socket - 12 volts rear socket - Trailer.

No	Rating	Functions
11	20 A	Audio equipment - Multi-function display - Steering wheel controls - Automatic gearbox.
12	10 A	Front right and rear right side lights - Number plate and trailer lighting - Central locking/alarm/hazard warning lights/ESP switches lighting - Air conditioning/ashtray light - Automatic gearbox switches lighting - Lighter.
14	30 A	Door opening/closing controls - Deadlocking controls.
15	30 A	Press operation electric rear windows.
16	10 A	Engine fuse box - Alarm - Particulate emission filter - Steering wheel controls - Air bags.
17	10 A	Rear right brake light, 3rd brake light.
18	10 A	Diagnostic socket - Steering wheel controls - Electrochromatic interior mirror - Brake pedal (stop) and clutch switches - Coolant level switch - Second brake switch.
19	30 A	PARC shunt.
22	10 A	Front left and rear left side lights - Number plate and trailer lighting.
23	15 A	Alarm siren - Interior alarm control unit.
24	15 A	Instrument panel - Audio equipment - Multi-function display - Air conditioning - Rear parking assistance - Rain/brightness sensor.
26	30 A	Heated rear screen.

Engine compartment

Advertisements

Assignment of the fuses in the engine compartment (2003)

N°	Rating	Functions
1	10 A	Automatic gearbox reversing lights switch - Automatic gearbox starting inhibitor relay control - Manual gearbox reversing lights switch - Vehicle speed sensor -Water in diesel sensor.
2	15 A	Canister solenoid valve - Fuel pump.

N°	Rating	Functions
3	10 A	Power steering control unit - ABS or ESP control unit.
4	10 A	Injection control unit - Fan unit relay control - Additional heating relay control -Automatic gearbox control unit - Automatic gearbox sequential control -Automatic gearbox shiftlock relay.
5	15 A	Particulate emission filter control unit.
6	15 A	Front fog lamps.
7	-	Not used.
8	20 A	Fan unit relay control - Engine management control unit supply - Injection pump (Diesel).
9	15 A	Left dipped beam.
10	15 A	Right dipped beam.
11	10 A	Right main beam.
12	10 A	Left main beam.
13	15 A	Horn.
14	10 A	Front and rear windscreen wash pumps.
15	30 A	Oxygen sensors - Exhaust gas recirculation solenoid valve - Ignition coil -Diesel high pressure regulator - Injectors supply (petrol) - Pre-heat control unit -Air flow sensor (Diesel) - Engine management control unit (Diesel) -Injection pump (Diesel) - Diesel heater.
16	30 A	Petrol engine air pump with automatic gearbox.
17	30 A	Front wiper low/high speed.
18	40 A	Air conditioning blower.
1*	50 A	Fan unit.
2*	30 A	ESP/ABS pump motor.

N°	Rating	Functions
3*	30 A	ESP/ABS solenoid valves.
4*	70 A	Built-in Systems Interface supply.
5*	70 A	Built-in Systems Interface supply.
6*	-	Not used.
7*	30 A	Ignition switch, power.
8*	70 A	Power steering electro-pump unit.
External fuse N°		
FV1*	20 A	Single speed fan unit.
FV2*	30 A	Dual speed fan unit.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxifuses and external fuses must be carried out by a PEUGEOT dealer</i>

2004

Advertisements

Dashboard Fuse box

or

Assignment of the fuses in the Dashboard Fuse box (2004)

No	Rating	Functions
1	10 A	Rear fog lamp.
2	15 A	Rear screen wiper.
4	15 A	Front electric window - Sunroof.
5	15 A	Left brake light including trailer.
7	20 A	Rear courtesy light, front courtesy light, map reading lights - 12 V front socket - Glove box lighting.
9	30 A	Front electric windows - Front automatic windows - Sunroof.
10	15 A	Diagnostic socket - 12 volt rear socket - Trailer.
11	20 A	Audio equipment - Multi-function display - Steering wheel controls - Automatic gearbox.
12	10 A	Front right and rear right side lights - Number plate and trailer lighting - Central locking/alarm/hazard warning lights/ESP switches lighting - Air conditioning/ashtray lighting - Automatic gearbox switches lighting - Lighter.
14	30 A	Door opening/closing controls - Deadlocking controls.
15	30 A	Press-operation electric rear windows.
16	10 A	Engine fuse box - Alarm - Particulate emission filter - Steering wheel controls - Air bags.
17	10 A	Rear right brake light. 3rd brake light.
18	10 A	Diagnostic socket - Steering wheel controls - Electrochromatic interior mirror - Brake pedal (stop) and clutch switches - Coolant level switch - Second brake switch.
19	30 A	PARC shunt.
22	10 A	Front left and rear left side lights - Number plate and trailer lighting.
23	15 A	Alarm siren - Interior alarm control unit.

No	Rating	Functions
24	15 A	Instrument panel - Audio equipment - Multi-function display - Air conditioning -Rear parking assistance - Rain/brightness sensor.
26	30 A	Heated rear screen.
27	10 A	Air bags (Fuse located on the ceiling of the fuse box)

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2004)

N°	Rating	Functions
1	10 A	Automatic gearbox reversing lights switch - Automatic gearbox starting inhibitor relay control - Manual gearbox reversing lights switch - Vehicle speed sensor -Water in diesel sensor.
2	15 A	Canister solenoid valve - Fuel pump.
3	10 A	Power steering control unit - ABS or ESP control unit.
4	10 A	Injection control unit - Fan unit relay control - Additional heating relay control -Automatic gearbox control unit - Automatic gearbox sequential

N°	Rating	Functions
		control -Automatic gearbox shiftlock relay.
5	15 A	Particulate emission filter control unit.
6	15 A	Front fog lamps.
7	20 A	Not used.
8	20 A	Fan unit relay control - Engine management control unit supply -Injection pump (Diesel).
9	15 A	Left dipped beam.
10	15 A	Right dipped beam.
11	10 A	Right main beam.
12	10 A	Left main beam.
13	15 A	Horn.
14	10 A	Front and rear windscreen wash pumps.
15	30 A	Oxygen sensors - Exhaust gas recirculation solenoid valve - Ignition coil - Diesel high pressure regulator - Injectors supply (petrol) - Pre-heat control unit - Air flow sensor (Diesel) - Engine management control unit (Diesel) - Injection pump (Diesel) - Diesel heater.
16	30 A	Petrol engine air pump with automatic gearbox.
17	30 A	Front wiper low/high speed.
18	40 A	Air conditioning blower.
1*	50 A	460 W fan unit.
1*	30 A	200 W fan unit.
2*	30 A	ESP/ABS pump motor.
3*	30 A	ESP/ABS solenoid valves.

N°	Rating	Functions
4*	70 A	Built-in Systems Interface supply.
5*	70 A	Built-in Systems Interface supply.
6*	20 A	Not used.
7*	30 A	Ignition switch, power.
8*	70 A	Power steering electro-pump unit.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxifuses must be carried out by a PEUGEOT dealer.</i>

2005

Dashboard Fuse box

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2005)

Nº	Rating	Functions
F1	15 A	Rear wiper.
F2	30 A	Locking and deadlocking.

№	Rating	Functions
F3	5 A	Air bags and pre-tensioners unit.
F4	10 A	Brake (STOP) and clutch pedal switches, engine coolant level switch, steering wheel angle sensor, ESP dual-function sensor, particle emission filter pump, diagnostic socket, electrochromatic mirror.
F5	30 A	Front electric windows, sunroof, heated mirrors.
F6	30 A	Rear electric windows.
F7	DA	Front and rear courtesy lights, map reading lights, glove box lighting.
F8	20 A	Audio equipment, audio/telephone, multifunction display, alarm siren, alarm unit, 12 V rear socket, trailer fuse box, driving school module.
F9	30 A	12V front socket.
F10	15 A	Automatic gearbox control unit, tyre under-inflation control unit, STOP switch.
F11	15 A	Diagnostic socket, particle emission filter unit, low current ignition switch.
F12	15 A	Driving school module.
F13	5 A	Engine fuse box, rain and brightness sensor.
F14	15 A	Trailer fuse box, instrument panel, air bags unit, automatic air conditioning, hands-free kit.
F15	30 A	Locking and deadlocking.
F16	-	PARC shunt.
F17	40 A	Heated rear screen.
F39	20 A	Heated seats

Engine compartment

OR

Assignment of the fuses in the engine compartment (2005)

N°	Rating	Functions
F1	20 A	Engine control unit and fan assembly high speed relay supply.
F2	15 A	Horn.
F3	10 A	Front and rear wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump and purge canister solenoid valve.

N°	Rating	Functions
F6	10 A	Automatic gearbox control unit, automatic gearbox lever locking control, push control switch, fan assembly high speed relay.
F7	10 A	ABS/ESP control unit, power steering electro-pump unit control unit.
F8	20 A	Ignition switch.
F9	10 A	Additional heating unit (Diesel), coolant level switch.
F10	30 A	Engine control unit actuators (ignition coil, solenoid valves, oxygen sensors, control units, injectors, heaters).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers low/high speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump (2 litre petrol).
F15	10 A	Right main beam headlamp.
F16	10 A	Left main beam headlamp.
F17	15 A	Left dipped headlamp.
F18	15 A	Right dipped headlamp.
MF1*	30 A	200 W fan unit.
MF1*	50 A	400 W and 460 W fan unit.
MF2*	30 A	ABS/ESP pump.
MF3*	30 A	ABS/ESP solenoid valves.
MF4*	80 A	Built-in systems interface supply.
MF5*	80 A	Built-in systems interface supply.
MF6*	80 A	Passenger compartment fuse box.

N°	Rating	Functions
MF8*	70 A	Power steering electro-pump unit.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.</i>

2007

Advertisements

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2007)

№	Rating	Functions
F1	15 A	Rear wiper.
F2	30 A	Locking and deadlocking.
F3	5 A	Air bags and pre-tensioners unit.
F4	10 A	Brake (STOP) and clutch pedal switches, engine coolant level switch, steering wheel angle sensor, ESP dual-function sensor, particle emission

№	Rating	Functions
		filter pump, diagnostic socket, electrochromatic mirror.
F5	30 A	Front electric windows, sunroof, heated mirrors.
F6	30 A	Rear electric windows.
F7	5 A	Front and rear courtesy lights, map reading lights, glove box lighting.
F8	20 A	Audio equipment, audio/telephone. multifunction display, alarm siren, alarm unit, trailer fuse box, driving school module, steering wheel controls supply.
F9	30 A	12 V front socket, 12 V rear socket.
F10	15 A	Automatic gearbox control unit, tyre under-inflation control unit, STOP switch.
F11	15 A	Diagnostic socket, particle emission filter unit, low current ignition switch.
F12	15 A	Driving school module, rear parking assistance.
F13	5 A	Engine fuse box, rain and brightness sensor.
F14	15 A	Trailer fuse box, instrument panel, air bags and pre-tensioners unit, automatic air conditioning, hands-free kit.
F15	30 A	Locking and deadlocking.
F16	-	PARC shunt.
F17	40 A	Heated rear screen.
F39	20 A	Heated seats

Advertisements

Engine compartment

OR**Assignment of the fuses in the engine compartment (2007)**

Nº	Rating	Functions
F1	20 A	Engine control unit and fan assembly high speed relays supply.
F2	15 A	Horn.
F3	10 A	Front and rear wash-wipe.
F4	20 A	Headlamp wash.
F5	15 A	Fuel pump and purge canister solenoid valve (2 litre petrol).

No	Rating	Functions
F6	10 A	Four speed automatic gearbox control unit, automatic gearbox lever locking control, push control switch, fan assembly high speed relay, right and left xenon headlamp's.
F7	10 A	ABS/ESP control unit, power steering electro-pump unit control unit.
F8	25 A	Starter control.
F9	10 A	Additional heating unit (Diesel), coolant level switch.
F10	30 A	Engine control unit actuators (ignition coil, solenoid valves, oxygen sensors, control units, injectors, heaters), purge canister solenoid valve (1.4 litre petrol and 1.6 litre petrol).
F11	40 A	Air conditioning blower.
F12	30 A	Windscreen wipers low/high speed.
F13	40 A	Built-in systems interface supply (ignition positive).
F14	30 A	Air pump (2 litre petrol).
F15	10 A	Right main beam headlamp.
F16	10 A	Left main beam headlamp.
F17	15 A	Left dipped headlamp.
F18	15 A	Right dipped headlamp.
F41	15 A	Six speed automatic gearbox control unit.
MF1*	30 A	200 W fan unit.
MF1*	50 A	400 W and 460 W fan unit.
MF2*	30 A	ABS/ESP pump.
MF3*	30 A	ABS/ESP solenoid valves.
MF4*	80 A	Built-in systems interface supply.

No	Rating	Functions
MF5*	80 A	Built-in systems interface supply.
MF6*	80 A	Passenger compartment fuse box.
MF8*	70 A	Power steering electro-pump unit.
		<i>* The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer.</i>

Learn more:



- [How to check the fuses?](#)
- [How to replace a blown fuse?](#)
- [Why do car fuses blow?](#)
- [Types of automotive fuses](#)

[Acura](#)

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Buick](#)

[Cadillac](#)

[Chevrolet](#)

[Chrysler](#)