



Cigar lighter (power outlet) fuses in the Peugeot 508 are the fuses F13 (Front cigar lighter), F14 (Front 12 V socket) in the Instrument panel fuse box #1, and fuses F3 (12 V socket for rear seats), F4 (12 V socket in boot) in the Instrument panel fuse box #2.

Table of Contents

Fuse box location

- Dashboard fuse boxes

- Engine compartment

Fuse box diagrams

- 2011, 2012, 2013, 2014

- 2016, 2017

Fuse box location

Dashboard fuse boxes

Left-hand drive vehicles:



Right-hand drive vehicles:

Engine compartment

It is placed in the engine compartment near the battery.

Fuse box diagrams

2011, 2012, 2013, 2014

Dashboard Fuse box 1 (left)

Assignment of the fuses in the Dashboard Fuse box 1 (2011-2014)

Fuse N°	Rating (A)	Functions
F6 A or B	15	Audio system.
F8	3	Alarm.
F13	10	Front cigar lighter.
F14	10	Front 12 V socket.
F16	3	Rear courtesy lamp, rear map reading lamps.
F17	3	Rear courtesy lamp, courtesy mirror.
F28 A or B	15	Audio system.
F30	20	Rear wiper.
F32	10	Audio amplifier.

Dashboard Fuse box 2 (right)

Assignment of the fuses in the Dashboard Fuse box 2 (2011-2014)

Fuse N°	Rating (A)	Functions
F3	15	Driver's electric window panel, 12 V socket for rear seats.
F4	15	12 V socket in boot.
F5	30	One-touch rear window.
F6	30	One-touch front window.
F11	20	Trailer unit.
F12	20	Audio amplifier.
F15	20	Panoramic sunroof blind (SW).
F16	5	Driver's electric window switch panel.

Advertisements

Engine compartment**Assignment of the fuses in the Engine compartment Fuse box (2011-2014)**

Fuse N°	Rating (A)	Functions
F20	15	Front/rear screenwash pump.
F21	20	Headlamp wash pump.
F22	15	Horn.
F23	15	Right-hand main beam headlamp.
F24	15	Left-hand main beam headlamp.
F27	5	Left hand lamp mask.
F28	5	Right hand lamp mask.

2016, 2017

Advertisements

Dashboard Fuse box 1 (left)

Assignment of the fuses in the Dashboard Fuse box 1 (2016, 2017)

Fuse N°	Rating (A)	Functions
F6 A or B	15	Audio system.
F8	3	Alarm.
F13	10	Front cigar lighter.
F14	10	Front 12 V socket.
F16	3	Rear courtesy lamp, rear map reading lamps.
F17	3	Rear courtesy lamp, courtesy mirror.
F28 A or B	15	Audio system.
F30	20	Rear wiper.
F32	10	Audio amplifier.

Dashboard Fuse box 2 (right)

Assignment of the fuses in the Dashboard Fuse box 2 (2016, 2017)

Fuse N°	Rating (A)	Functions
F3	15	Driver's electric window panel, 12 V socket for rear seats.
F4	15	12 V socket in boot.
F5	30	One-touch rear window.
F6	30	One-touch front window.
F11	20	Trailer unit.
F12	20	Audio amplifier.
F15	20	Panoramic sunroof blind (SW and non-hybrid RXH).
F16	5	Driver's electric window switch panel.

Advertisements

Engine compartment

Assignment of the fuses in the Engine compartment Fuse box (2016, 2017)

Fuse N°	Rating (A)	Functions
F20	15	Front / rear screenwash pump.
F21	20	Headlamp wash pump.
F22	15	Horn.
F23	13	Right-hand main beam headlamp.
F24	15	Left-hand main beam headlamp.

[Learn more:](#)



- [How to check the fuses?](#)
- [How to replace a blown fuse?](#)
- [Why do car fuses blow?](#)
- [Types of automotive fuses](#)

[Acura](#)

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Buick](#)

[Cadillac](#)

[Chevrolet](#)

[Chrysler](#)