

item code	designation	information
1032	null	electrical power supply protection and management box
1115	null	cylinder reference sensor /
1208	null	high-pressure fuel pump /
1211	null	pump set - fuel gauge
1221	null	fuel temperature sensor
1229	null	turbocharger pressure-regulating electrovane
1253	null	electrovane all or nothing exhaust recycling (EGR)
1261	null	position sensor of the accelerator pedal /
1273	null	heating resistance of the oil vapour reassurable circuit 1
1276	null	electric fuel heater /
1283	null	fuel additive pump
1297	null	electric exhaust recycling valve
1310	null	air flow meter
1313	null	engine speed sensor
1320	null	engine control calculator
1321	null	high-pressure fuel sensor
1324	null	Electrical intake air doser with built-in position copy sensor
1331	null	No. 1 cylinder injector
1332	null	No. 2 cylinder injector
1333	null	No. 3 cylinder injector
1334	null	No. 4 cylinder injector
1341	null	differential pressure sensor of the particle filter /
1344	null	upstream exhaust temperature sensor
1356	null	brake system depression sensor /
1357	null	proportional oxygen probe
1374	null	turbocharger position copy sensor
13A3	null	Admission air pressure and temperature sensor
1522	null	control calculator of the twin-speed motorbike group
4050	null	water sensor (fuel decanter)
4110	null	motor oil pressure mancontact
4120	null	engine oil level sensor /
8007	null	pressostat / refrigerant pressure sensor
AE00	null	electric anti-theft steering
BB00	null	bondage battery
BSI1	null	Smart Bondage Case (BSI1)
CA00	null	anti-theft steering contactor
E013	null	spide of an information thread (or equipotential 0013)
E018	null	spide of an information thread (or equipotential 0018)
E100	null	spide from an information thread (or equipotential 100)
E200	null	spide from an information thread (or equipotential 200)
E300A	null	spide of an information thread (or equipotential 300A)
E400	null	spide of an information thread (or equipotential 400)
E809	null	spide from an information thread (or equipotential 809)
E900A	null	spide of an information thread (or equipotential 276A)
E901A	null	spide of an information thread (or equipotential 901A)
E917	null	spide from an information thread (or equipotential 917)
E917A	null	spide of an information thread (or equipotential 917A)
E918	null	spide from an information thread (or equipotential 918)
E918A	null	spide of an information thread (or equipotential 918A)
E953	null	spide from an information thread (or equipotential 953)
EM12	null	mass spousal (mass point number 12)
EM12A	null	mass spousal (mass point number 12A)
EM53	null	mass spousal (mass point number 53)
MC10	null	mass point cash number 10
MC12	null	mass point cash number 12
MC12B	null	mass point cash number 12
MC53B	null	mass point cash number 53B
MM01	null	engine mass point number 01
MM01A	null	engine mass point number 01A
PSF1	null	bondage plate - engine compartment fuse box