



Table of Contents

Fuse box location

- Dashboard fuse box

- Engine compartment

- Fuses on the battery

Fuse box diagrams

- 2002, 2003, 2004

- 2005

- 2006

- 2007, 2008, 2009

- 2010, 2011, 2012, 2013

Fuse box location

Dashboard fuse box

Left-hand drive vehicles: the fuses are located in the lower glove box on the dashboard (right side).



Right-hand drive vehicles: it is located under the fascia (driver's side)



Engine compartment

Fuses on the battery

The fuses are located in the battery compartment, housed underneath the floor in front of the seat on the righthand side.

Fuse box diagrams

Advertisements

2002, 2003, 2004

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2002, 2003, 2004)

| No | Rating | Functions |
|-----------|---------------|---|
| 1 | 10 A | Rear fog lamp. |
| 2 | 15 A | Rear screen wiper. |
| 4 | 15 A | Supply to functions via the built-in systems interface. |
| 5 | 10 A | Left brake light. |
| 7 | 20 A | Map readers - Lighter - Passenger lower glove box lighting - Electrochrome interior mirror. |
| 9 | 30 A | Front electric windows - Front sunroof. |
| 10 | 20 A | Diagnostic socket - Trailer socket. |
| 11 | 15 A | Alarm - Telematics - Audio equipment - Multifunction displays - Steering wheel controls - Particle emission filter. |

| No | Rating | Functions |
|-----------|---------------|--|
| 12 | 10 A | Right side lights - Number plate lighting -Air conditioning panel light - Courtesy lights. |
| 14 | 30 A | Central locking - Deadlocking. |
| 15 | 30 A | Rear windows. |
| 16 | 5 A | Air bags control unit supply via the built-in systems interface |
| 17 | 15 A | Right brake light, 3rd brake light - Trailer brake lights. |
| 18 | 10 A | Diagnostic socket supply – Brake and clutch pedal switches. |
| 19 | 40 A | PARC shunt. |
| 20 | 10 A | Audio equipment supply via the built-in systems interface. |
| 22 | 10 A | Left side lights - Trailer side lights. |
| 23 | 15 A | Alarm siren - Automatic gearbox control unit. |
| 24 | 15 A | Rear parking assistance supply via the built-in systems interface. |
| 26 | 40 A | Heated rear screen. |

Engine compartment

Advertisements

Assignment of the fuses in the engine compartment (2002, 2003, 2004)

| N° | Rating | Functions |
|-----------|---------------|---|
| 1 | 10 A | Manual gearbox reversing lights switch - Xenon headlamps - Fan unit relay control - Engine coolant level - Oil heater or pre-heat unit (Diesel) - Vehicle speed sensor or air flow sensor (Diesel). |
| 2 | 15 A | Fuel pump - Exhaust gas recirculation and Turbo pressure regulation solenoid valves (Diesel). |
| 3 | 10 A | ABS or ESP control unit. |
| 4 | 10 A | Engine wiring housing ignition positive supply |

| N° | Rating | Functions |
|-----------|---------------|--|
| 5 | 10 A | Not used or particle emission filter injector (Diesel) - Particle emission filter control unit (Diesel). |
| 6 | 15 A | Front fog lamps. |
| 7 | 20 A | Headlamp wash pump. |
| 8 | 20 A | Supply via the engine wiring housing relay - Fan unit relay control (Diesel) — Diesel high pressure regulation and exhaust gas recirculation solenoid valves (Diesel). |
| 9 | 15 A | Left dipped beam - Headlamp height adjuster. |
| 10 | 15 A | Right dipped beam. |
| 11 | 10 A | Left main beam. |
| 12 | 10 A | Right main beam. |
| 13 | 15 A | Horn. |
| 14 | 10 A | Front and rear wash-wipe pump. |
| 15 | 30 A | Oxygen sensor - Injectors - Ignition coil - Canister, timing and exhaust gas recirculation solenoid valves (Petrol) - Injection pump solenoid valve (Diesel). |
| 16 | 30 A | Not used or air pump (Petrol). |
| 17 | 30 A | Front wiper. |
| 18 | 40 A | Additional blowers. |
| 1* | 50 A | Fan unit (high speed). |
| 2 - | 50 A | ABS control unit or ESP control unit. |
| 3* | 30 A | Not used or ESP solenoid valve or Additional heating (Diesel). |
| 4* | 60 A | Built-in Systems Interface supply 1. |
| 5* | 70 A | Built-in Systems Interface supply 2. |

| N° | Rating | Functions |
|-----------|---------------|---|
| 6* | 30 A | Fan unit (low speed). |
| 7* | 40 A | Electronic immobiliser. |
| 8* | 50 A | Air conditioning blowers. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

Fuses on the battery

Assignment of the fuses on the battery (2002, 2003, 2004)

| N° | Rating | Functions |
|-----------|---------------|-----------------------------------|
| 1* | 40 A | Right electric sliding side door. |
| 2* | 40 A | Left electric sliding side door. |
| 3* | 30 A | HI-FI amplifier. |

| N° | Rating | Functions |
|----|--------|---|
| 4* | 30 A | Not used or Additional heating (Diesel). |
| 29 | — | Not used. |
| 30 | — | Not used. |
| 31 | — | Not used. |
| 32 | 25 A | Driver's electric seat. |
| 33 | 25 A | Passenger electric seat. |
| 34 | 20 A | 3rd row sunroof. |
| 35 | 20 A | 2nd row sunroof. |
| 36 | 10 A | Passenger heated seat. |
| 37 | 10 A | Driver's heated seat. |
| 38 | 15 A | Electric child lock. |
| 39 | 20 A | 3rd row 12V accessories socket. |
| 40 | 20 A | 2nd row 12V accessories socket. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

2005

Advertisements

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2005)

| No | Rating | Functions |
|-----------|---------------|---|
| 1 | 10 A | Rear fog lamp. |
| 2 | 15 A | Rear screen wiper. |
| 4 | 15 A | Supply to functions via the built-in systems interface. |
| 5 | 10 A | Left brake light. |
| 7 | 20 A | Map readers - Lighter - Passenger lower glove box lighting - Electrochrome interior mirror. |
| 9 | 30 A | Front electric windows - Front sunroof. |
| 10 | 20 A | Diagnostic socket - Trailer socket. |
| 11 | 15 A | Alarm - Telematics - Audio equipment - Multifunction displays - Steering wheel controls - Particle emission filter. |

| No | Rating | Functions |
|-----------|---------------|--|
| 12 | 10 A | Right side lights - Number plate lighting -Air conditioning panel light - Courtesy lights. |
| 14 | 30 A | Central locking - Deadlocking. |
| 15 | 30 A | Rear windows. |
| 16 | 5 A | Air bags control unit supply via the built-in systems interface |
| 17 | 15 A | Right brake light, 3rd brake light - Trailer brake lights. |
| 18 | 10 A | Diagnostic socket supply – Brake and clutch pedal switches. |
| 19 | 40 A | PARC shunt. |
| 20 | 10 A | Audio equipment supply via the built-in systems interface. |
| 22 | 10 A | Left side lights - Trailer side lights. |
| 23 | 15 A | Alarm siren - Automatic gearbox control unit. |
| 24 | 15 A | Rear parking assistance supply via the built-in systems interface. |
| 26 | 40 A | Heated rear screen. |

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2005)

| N° | Rating | Functions |
|----|--------|--|
| 1 | 10 A | Manual gearbox reversing lights switch - Xenon headlamps - Fan unit relay control - Engine coolant level - Oifneater or pre-heat unit (Diesel) - Vehicle speed sensor or air flow sensor (Diesel). |
| 2 | 15 A | Fuel pump - Exhaust gas recirculation and Turbo pressure regulation solenoid valves (Diesel). |
| 3 | 10 A | ABS or ESP control unit. |
| 4 | 10 A | Engine fusebox ignition positive supply. |
| 5 | 10 A | Not used or particle emission filter injector (Diesel) - Particle emission filter control unit (Diesel). |
| 6 | 15 A | Front fog lamps. |

| N° | Rating | Functions |
|-----------|---------------|---|
| 7 | 20 A | Headlamp wash pump. |
| 8 | 20 A | Supply via the engine fusebox relay - Fan unit relay control (Diesel) - Diesel high pressure regulation and exhaust gas recirculation solenoid valves (Diesel). |
| 9 | 15 A | Dipped beam relay (vehicle not fitted with Xenon headlamps only) - Headlamp height adjuster. |
| 10 | 15 A | Dipped beam relay (vehicle not fitted with Xenon headlamps only). |
| 11 | 10 A | Left main beam. |
| 12 | 10 A | Right main beam. |
| 13 | 15 A | Horn. |
| 14 | 10 A | Front and rear wash-wipe pump. |
| 15 | 30 A | Oxygen sensor - Injectors - Ignition coil - Canister, timing and exhaust gas recirculation solenoid valves (Petrol) - Injection pump solenoid valve (Diesel). |
| 16 | 30 A | Not used or air pump (Petrol). |
| 17 | 30 A | Front wiper. |
| 18 | 40 A | Additional blowers. |
| 1* | 50 A | Fan unit (high speed). |
| 2* | 50 A | ABS control unit or ESP control unit. |
| 3* | 30 A | Not used or ESP solenoid valve or Additional heating (Diesel). |
| 4* | 60 A | Built-in Systems Interface supply 1. |
| 5* | 70 A | Built-in Systems Interface supply 2. |
| 6* | 30 A | Fan unit (low speed). |
| 7* | 40 A | Electronic immobiliser. |

| N° | Rating | Functions |
|----|--------|---|
| 8* | 50 A | Air conditioning blowers. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

Advertisements

Fuses on the battery

Assignment of the fuses on the battery (2005)

| N° | Rating | Functions |
|----|--------|--|
| 1* | 40 A | Right electric sliding side door. |
| 2* | 40 A | Left electric sliding side door. |
| 3* | 30 A | Not used. |
| 4* | 30 A | Not used or Additional heating (Diesel). |

| N° | Rating | Functions |
|----|--------|---|
| 29 | - | Not used. |
| 30 | 10 A | Right dipped headlamp (vehicle not fitted with Xenon headlamps only). |
| 31 | 10 A | Left dipped headlamp (vehicle not fitted with Xenon headlamps only). |
| 32 | 25 A | Driver's electric seat. |
| 33 | 25 A | Passenger electric seat. |
| 34 | 20 A | 3rd row sunroof. |
| 35 | 20 A | 2nd row sunroof. |
| 36 | 10 A | Passenger heated seat. |
| 37 | 10 A | Driver's heated seat. |
| 38 | 15 A | Electric child lock. |
| 39 | 20 A | 3rd row 12V accessories socket. |
| 40 | 20 A | 2nd row 12 V accessories socket. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

2006

Dashboard Fuse box

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2006)

| N | Rating | Functions |
|----------|---------------|---|
| 1 | 10 A | Rear fog lamps. |
| 2 | 15 A | Rear screen wiper. |
| 4 | 15 A | Supply to functions via the built-in systems interface. |
| 5 | 10 A | Left brake light. |
| 7 | 20 A | Map readers - Lighter - Passenger lower glove box lighting - Electrochromatic interior mirror. |
| 9 | 30 A | Front electric windows - Front sunroof. |
| 10 | 20 A | Diagnostic socket. |

| N | Rating | Functions |
|----------|---------------|---|
| 11 | 15 A | Alarm - Telematics - Audio equipment - Multi-function screens - Steering wheel controls - Particulate emission |
| 12 | 10 A | Right side lights - Number plate lighting - Air conditioning light - Courtesy lights. |
| 14 | 30 A | Central locking - Deadlocking. |
| 15 | 30 A | Rear windows. |
| 16 | 5 A | Air bags ECU supply via the built-in systems interface. |
| 17 | 15 A | Right brake light - Additional brake light - Trailer brake lights. |
| 18 | 10 A | Diagnostic socket supply - Brake and clutch pedal switches - Motorised sliding side doors actuator cut-off unit supply. |
| 19 | 40 A | PARC shunt. |
| 20 | 10 A | Audio equipment supply via the built-in systems interface. |
| 22 | 10 A | Left side lights - Trailer side lights. |
| 23 | 15 A | Alarm siren - Automatic gearbox ECU. |
| 24 | 15 A | Rear parking assistance supply via the built-in systems interface. |
| 26 | 40 A | Heated rear screen. |

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2006)

| No | Rating | Functions |
|-----------|---------------|---|
| 1 | 10 A | Manual gearbox reversing lights switch - Xenon headlamps Fan unit relay control - Engine coolant level - Oil heater or Pre-heating unit (Diesel) - Vehicle speed sensor or Air flow meter (Diesel). |
| 2 | 15 A | Fuel pump - Exhaust gas recirculation and Turbo pressure regulation solenoid valves (Diesel). |
| 3 | 10 A | ABS ECU or ESP ECU. |
| 4 | 10 A | Engine Fuse Box ignition positive supply. |
| 5 | 10 A | Unused or Particulate emission filter injector (Diesel) - Particulate emission filter ECU (Diesel). |
| 6 | 15 A | Front fog lamps. |

| No | Rating | Functions |
|-----------|---------------|---|
| 7 | 20 A | Headlamp wash pump. |
| 8 | 20 A | Supply via the Engine Fuse Box - Fan unit relay control (Diesel) - Diesel high pressure regulation and exhaust gas recirculation solenoid valves (Diesel) |
| 9 | 15 A | Dipped headlamp relay (vehicle not fitted with Xenon headlamps only) - Headlamp height adjuster. |
| 10 | 15 A | Dipped headlamp relay (vehicle not fitted with Xenon headlamps only). |
| 11 | 10 A | Left main beam headlamp. |
| 12 | 10 A | Right main beam headlamp. |
| 13 | 15 A | Horn. |
| 14 | 10 A | Front and rear windscreen wash pumps. |
| 15 | 30 A | Oxygen sensor - Injectors - Ignition coil - Canister, distribution and exhaust gas recirculation solenoid valves (petrol) - Injection pump solenoid valve (Diesel). |
| 16 | 30 A | Unused or Air pump (petrol). |
| 17 | 30 A | Front windscreen wipers. |
| 18 | 40 A | Additional blowers. |
| 1* | 50 A | Fan unit (High Speed). |
| 2* | 50 A | ABS ECU or ESP ECU. |
| 3* | 30 A | Unused or ESP solenoid valve or Additional heating (Diesel). |
| 4* | 60 A | Built-in Systems Interface supply 1. |
| 5* | 70 A | Built-in Systems Interface supply 2. |
| 6* | 30 A | Fan unit (Slow Speed). |
| 7* | 40 A | Electronic engine immobiliser. |

| No | Rating | Functions |
|-----------|---------------|---|
| 8* | 50 A | Air conditioning blowers. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

Fuses on the battery

Assignment of the fuses on the battery (2006)

| No | Rating | Functions |
|-----------|---------------|--|
| 1 * | 40 A | Right electric sliding side door. |
| 2 * | 40 A | Left electric sliding side door. |
| 3 * | 40 A | Unused or trailer connection. |
| 4 * | 30 A | Unused or Additional heating (Diesel). |
| 29 | - | Unused. |

| No | Rating | Functions |
|-----------|---------------|---|
| 30 | 10 A | Right dipped headlamp (vehicle not fitted with Xenon headlamps only). |
| 31 | 10 A | Left dipped headlamp (vehicle not fitted with Xenon headlamps only). |
| 32 | 25 A | Driver's electric seat. |
| 33 | 25 A | Passenger electric seat. |
| 34 | 20 A | 3rd row sunroof. |
| 35 | 20 A | 2nd row sunroof. |
| 36 | 10 A | Passenger heated seat. |
| 37 | 10 A | Driver's heated seat. |
| 38 | 15 A | Electric child lock. |
| 39 | 20 A | 3rd row 12 V accessories socket. |
| 40 | 20 A | 2nd row 12 V accessories socket. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

2007, 2008, 2009

Dashboard Fuse box

Advertisements

Assignment of the fuses in the Dashboard Fuse box (2007, 2008, 2009)

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|---|
| 1 | 15 | Rear wiper. |
| 2 | - | Not used. |
| 3 | 5 | Air bag control unit. |
| 4 | 10 | Steering wheel angle sensor, Diagnostic socket, ESP sensor, Manual air conditioning, Clutch switch, Headlamp beam height, Particle emission filter pump, Electrochromatic interior mirror |
| 5 | 30 | Electric mirrors, Electric window motor. |
| 6 | 30 | Front electric windows supply, Sunroof row 1. |

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|--|
| 7 | 5 | Courtesy lights, Glove box light, Courtesy mirror lights. |
| 8 | 20 | Multifunction display, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Trailer fuse box, Diesel additive control unit, Tyre under-inflation detection control unit, Sliding doors module control unit. |
| 9 | 30 | Lighter. |
| 10 | 15 | Steering wheel switching, Trailer fuse box. |
| 11 | 15 | Diagnostic socket, Ignition switch, Automatic gearbox. |
| 12 | 15 | Driver's seat memory unit, Passenger's electric seat, Air bag control unit, Parking assistance control unit, Sliding side door buttons |
| 13 | 5 | Engine fuse box, Trailer fuse box. |
| 14 | 15 | Rain sensor, Automatic air conditioning, Instrument panel, Sunroofs, Odometer warning lights unit, Audio-telematics control. |
| 15 | 30 | Locking/unlocking/deadlocking of the accesses. |
| 16 | - | Not used. |
| 17 | 40 | Heated rear screen. |

Advertisements

Engine compartment

Assignment of the fuses in the engine compartment (2007, 2008, 2009)

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|---|
| 1 | 20 | Engine control unit, Fuel supply and air supply systems, Fan assembly. |
| 2 | 15 | Horn. |
| 3 | 10 | Front and rear wash-wipe pump. |
| 4 | 20 | Headlamp wash pump. |
| 5 | 15 | Fuel supply system. |
| 6 | 10 | Power steering, Secondary brake pedal switch, Automatic gearbox control unit. |

| N° | Rating (Amps) | Functions |
|--------|------------------|--|
| 7 | 10 | Braking system (ABS/ESP). |
| 8 | 20 | Starter control. |
| 9 | 10 | Engine control unit. |
| 10 | 30 | Fuel supply and air supply systems, Emission control systems. |
| 11 | 40 | Front air conditioning. |
| 12 | 30 | Windscreen wipers. |
| 13 | 40 | Built-in systems interface. |
| 14 | 30 | Not used. |
| 1* | 50 | Air conditioning blowers. |
| 2* | 40 | Braking system (ABS/ESP). |
| 3 * | 30 | Braking system (ABS/ESP). |
| 4 * | 60 | Built-in Systems Interface supply. |
| 5 * | 70 | Built-in Systems Interface supply. |
| 6* | 20 | Additional heating (Diesel). |
| 7 * | | Not used. |
| 8* | | Not used. |
| | | * The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer. |

Fuses on the battery

Assignment of the fuses on the battery (2007, 2008, 2009)

| N° | Rating (Amps) | Functions |
|--------|------------------|--------------------------------|
| 1 * | 40 | Electric sliding side door. |
| 2 * | 40 | Electric sliding side door. |
| 3 * | - | Not used. |
| 4 * | 40 | Trailer fuse box. |
| 31 | 5 | Main brake switch. |
| 32 | 25 | Driver's seat memorisation. |
| 33 | 25 | Passenger's seat memorisation. |

| N° | Rating (Amps) | Functions |
|----|------------------|---|
| 34 | 20 | Sunroof row 3. |
| 35 | 20 | Sunroof row 2. |
| 36 | 10 | Passenger's heated seat. |
| 37 | 10 | Driver's heated seat. |
| 38 | 15 | Main beam headlamps (xenon bulb). |
| 39 | 20 | 12 V accessories socket row 3. |
| 40 | 20 | 12 V accessories socket row 2. |
| | | * <i>The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

2010, 2011, 2012, 2013

Advertisements

Dashboard Fuse box

Assignment of the fuses in the Dashboard Fuse box (2010, 2013)

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|--|
| 1 | 15 | Rear wiper. |
| 2 | - | Not used. |
| 3 | 5 | Air bag control unit. |
| 4 | 10 | Steering wheel angle sensor, Diagnostic socket, ESP sensor, Manual air conditioning, Clutch switch, Headlamp beam height, Particle emission filter pump, Electrochromatic interior mirror. |
| 5 | 30 | Electric mirrors, Passenger's electric window motor, Sunroof row 1. |
| 6 | 30 | Front electric windows supply. |
| 7 | 5 | Courtesy lights, Glove box light, Courtesy mirror lights, Entertainment screen lights row 2. |

| N° | Rating (Amps) | Functions |
|----|------------------|--|
| 8 | 20 | Multifunction display, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/ telephone, Diesel additive control unit, Tyre under-infl ation detection control unit, Sliding doors module control unit. |
| 9 | 30 | Lighter. |
| 10 | 15 | Steering wheel switching, Trailer fuse box. |
| 11 | 15 | Diagnostic socket, Ignition switch, Automatic gearbox (4-speed). |
| 12 | 15 | Driver's seat memory unit, Passenger's electric seat, Air bag control unit, Parking assistance control unit, Sliding side door buttons, Hands-free kit, Automatic gearbox (6-speed). |
| 13 | 5 | Engine fuse box, Trailer fuse box. |
| 14 | 15 | Rain sensor, Automatic air conditioning, Instrument panel, Sunroofs, Odometer warning lights unit, Audio-telematics control. |
| 15 | 30 | Passenger's lock locking. |
| 16 | 30 | Locking/unlocking of the accesses. |
| 17 | 40 | Heated rear screen. |

Engine compartment

Advertisements

Assignment of the fuses in the engine compartment (2010, 2013)

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|--|
| 1 | 20 | Engine control unit. Fuel supply and air supply systems, Fan assembly. |
| 2 | 15 | Horn. |
| 3 | 10 | Front and rear wash-wipe pump. |
| 4 | 20 | Headlamp wash pump. |
| 5 | 15 | Fuel supply system. |

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|---|
| 6 | 10 | Power steering, Secondary brake pedal switch, Automatic gearbox control unit, Air flow sensor, Automatic beam corrector with xenon bulbs. |
| 7 | 10 | Braking system (ABS/ESP). |
| 8 | 20 | Starter control. |
| 9 | 10 | Main brake switch. |
| 10 | 30 | Fuel supply and air supply systems, Emission control systems. |
| 11 | 40 | Front air conditioning. |
| 12 | 30 | Windscreen wipers. |
| 13 | 40 | Built-in systems interface. |
| 14 | 30 | Not used. |
| 15 | 30 | Child lock locking/unlocking/deadlocking control. |

Fuses on the battery

Assignment of the fuses on the battery (2010, 2013)

| N° | Rating (Amps) | Functions |
|-----------|--------------------------|--------------------------------|
| 1* | 40 | Electric sliding side door. |
| 2* | 40 | Electric sliding side door. |
| 3* | - | Not used. |
| 4* | 40 | Trailer fuse box. |
| 31 | 5 | Main brake switch. |
| 32 | 25 | Driver's seat memorisation. |
| 33 | 25 | Passenger's seat memorisation. |
| 34 | 20 | Sunroof row 3. |
| 35 | 20 | Sunroof row 2. |
| 36 | 10 | Passenger's heated seat. |

| N° | Rating (Amps) | Functions |
|----|---------------|---|
| 37 | 10 | Driver's heated seat. |
| 38 | 15 | Not used. |
| 39 | 20 | 12 V accessories socket row 3. |
| 40 | 20 | 12 V accessories socket row 2. |
| | | <i>* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.</i> |

Learn more:



- [How to check the fuses?](#)
- [How to replace a blown fuse?](#)
- [Why do car fuses blow?](#)
- [Types of automotive fuses](#)

[Acura](#)

[Alfa Romeo](#)

[Audi](#)

[BMW](#)

[Buick](#)

[Cadillac](#)