

Passenger compartment

It is located under the panel, on the left side, near the pillar behind the protective cover.



Photo for example



Diagram



1	9	17
2	10	18
3	11	19
4	12	20
5	13	21
6	14	22
7	15	23
8	16	24

Designation

1	15A Heated windshield
2	15A Alarm
3	10A Diagnostic connector (DLC)
4	Reserve
5	15A Fog lights
6	10A Interior lamp
7	20A brake light
8	10A Trip computer, brake lights, instrument cluster, air conditioning / heater blower motor (front), gearbox ECM, ECM, daytime lighting system, multifunction control unit
9	20A Hatch
10	20A Auxiliary equipment connector (front)
11	20A Wipers and washers (front), headlight, air conditioning / heater blower motor (front), defroster
12	10A Rear window wiper / washer, sunroof, trip computer, multifunction control unit, air conditioning / heating system
13	15A Transmission
14	Reserve
15	10A Direction indicators / hazard warning lights
16	Reserve
17	10A Starting system, electronic engine control module (ECM), electronic gearbox control unit (TCM)
20	20A Cigarette lighter
19	30A Auxiliary power connector (rear)
20	10A Power door mirrors, cigarette lighter, accessory socket, clock, remote central locking system, audio system

21	Reserve
22	Reserve
23	10A SRS electronic control unit
24	10A ECM, vehicle speed sensor, diagnostic connector, ABS system, instrument cluster, electronic gearbox control unit

”

The fuse number 18, 20A, is responsible for the cigarette lighter.

Engine compartment


Located on the left side, next to the battery.

The photo



Diagram



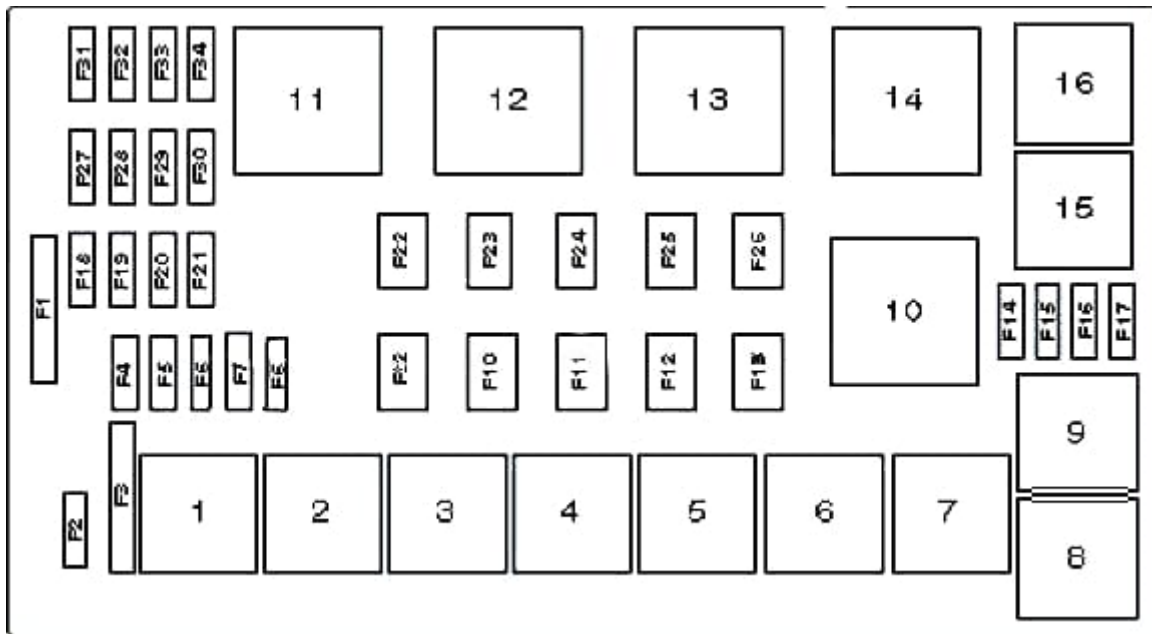

Designation

F1	120A Generator
F2	15A Buzzer
F3	15A Audio system
F4	15A High beam headlights
F5	15A Low beam headlights
F6	15 / 25A Heated rear window
F7	10A Air conditioning / heater control unit, electronic gearbox control unit
F8	15A Rear fog lamp
F9	30A Starting system
F10	30A Anti lock brake system (ABS)
F11	20A Air conditioning system
F12	30A Cooling fan motor
F13	30A Ignition switch
F14	30A Spare
F15	20A Spare
F16	15A Spare
F17	10A Spare
F18	30A Anti lock brake system (ABS)
F19	10A Ignition switch illumination lamp

F20	10A License plate lamps, rear
F21	15A Fuel pump relay
F22	40A Cigarette lighter
F23	30A Air conditioning system (rear heater)
F24	30A Heater blower motor relay (front)
F25	40A Accessory power connector
F26	40A Power passenger seat
F27	10 / 15A Electronic Engine Control Module (ECM), Engine Control System Relay
F28	-
F29	25A Electric lift glass, left
F30	25A Electric lift glass, right
F31	15A Electronic engine control unit
F32	15A Electronic engine control unit
F33	15A Electronic engine control unit
F34	10A Control unit blower motor

Relay assignment

1. Heated rear window relay
2. Fog lamp relay
3. Tailgate relay
4. Headlamp high beam relay
5. Headlamp low beam relay
6. Horn relay
7. Fuel pump relay
8. Cooling Fan Motor Relay (Low Speed)
9. Air conditioner relay
10. Cooling Fan Motor Relay (High Speed)
11. Starter relay
12. Engine control relay
13. Heater blower motor relay (front)
14. Power window relay
15. A / C condenser fan motor relay

